



UHF RFID For PM80

Enterprise Mobility

RF800

User Manual

User Manual



“This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”



This product is labeled with the CE mark in accordance with the provisions of the applicable RoHS Directive 2011/65/EU for this product and the electric accessories.



R-C-D0t-DOTR-3000

For European Community Users



We have included this bulletin to comply with Directive 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on Waste Electrical and Electronic Equipment (WEEE)

This product has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment, If not, properly

disposed. In order to avoid the dissemination of those substances in our environment and diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems for product disposal. Those systems will reuse or recycle most of the materials of the product you are disposing in a sound way. The crossed out wheeled bin symbol inform you that the product should not be disposed of along with municipal waste and invites you to use the appropriate separate take-back systems for product disposal.

If you need more information on the collection, reuse, and recycling system, please contact your local or regional waste administration. You can also contact your supplier for more information on the environmental performances of this product.



Rev 01

Table of Contents

Table of Contents	2
Getting Started.....	3
Major Parts	3
Accessory	4
Charge RF800	5
Install PM80 to RF800	7
Learning the basics.....	8
Install the RF800 Demo App	8
Bluetooth Pairing with RF800.....	9
RF800 Demo App Settings	15
RFID Tag reading.....	18
Barcode reading	20

Major Parts


Getting Started

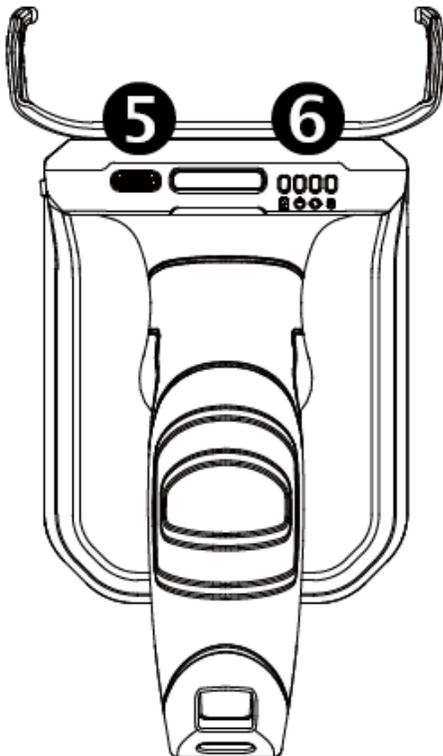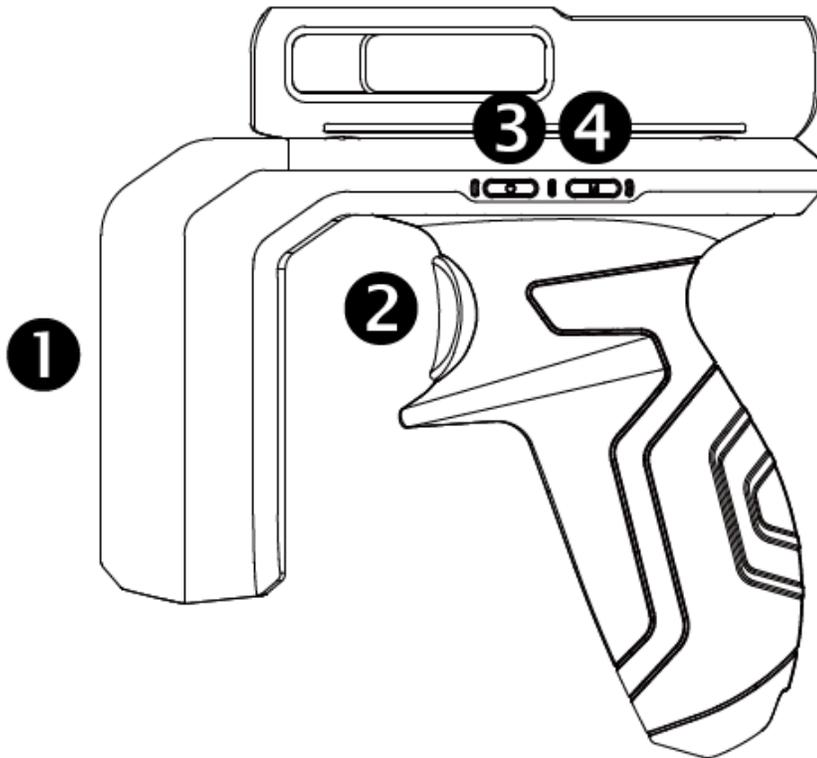


1. UHF RFID Antenna
2. Trigger
3. Power Key
4. Mode Change Key
5. USB Type-C Connector
6. LED Indicator

Accessory


AC/DC adapter (5V2A)

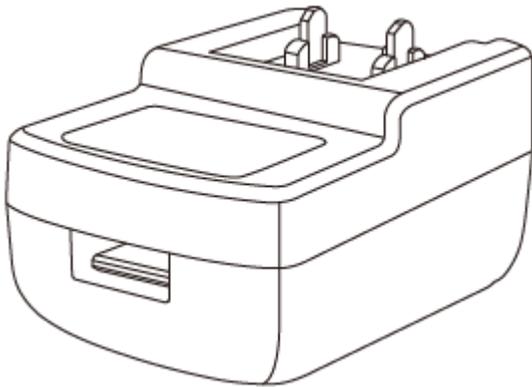

Country Plug (US/ EU/KR)

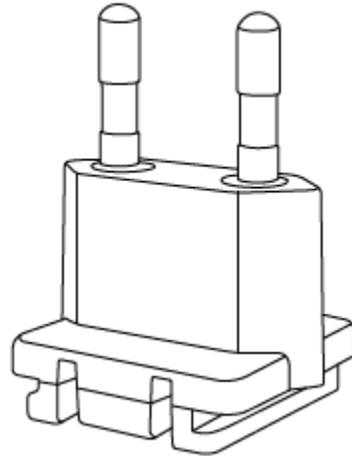

Hand Strap

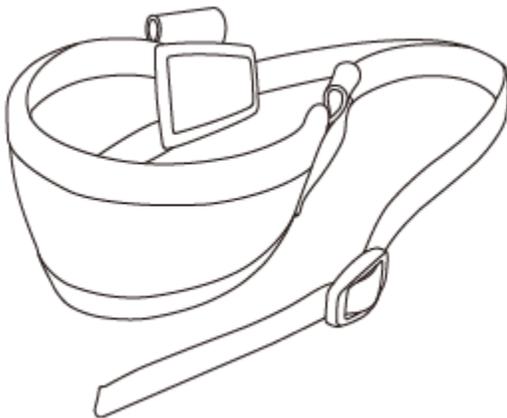


USB Type-C cable



Charge RF800


Getting Started

Connect the AC/DC adaptor to your device and wall socket respectively.
LED indicator will display charging status.

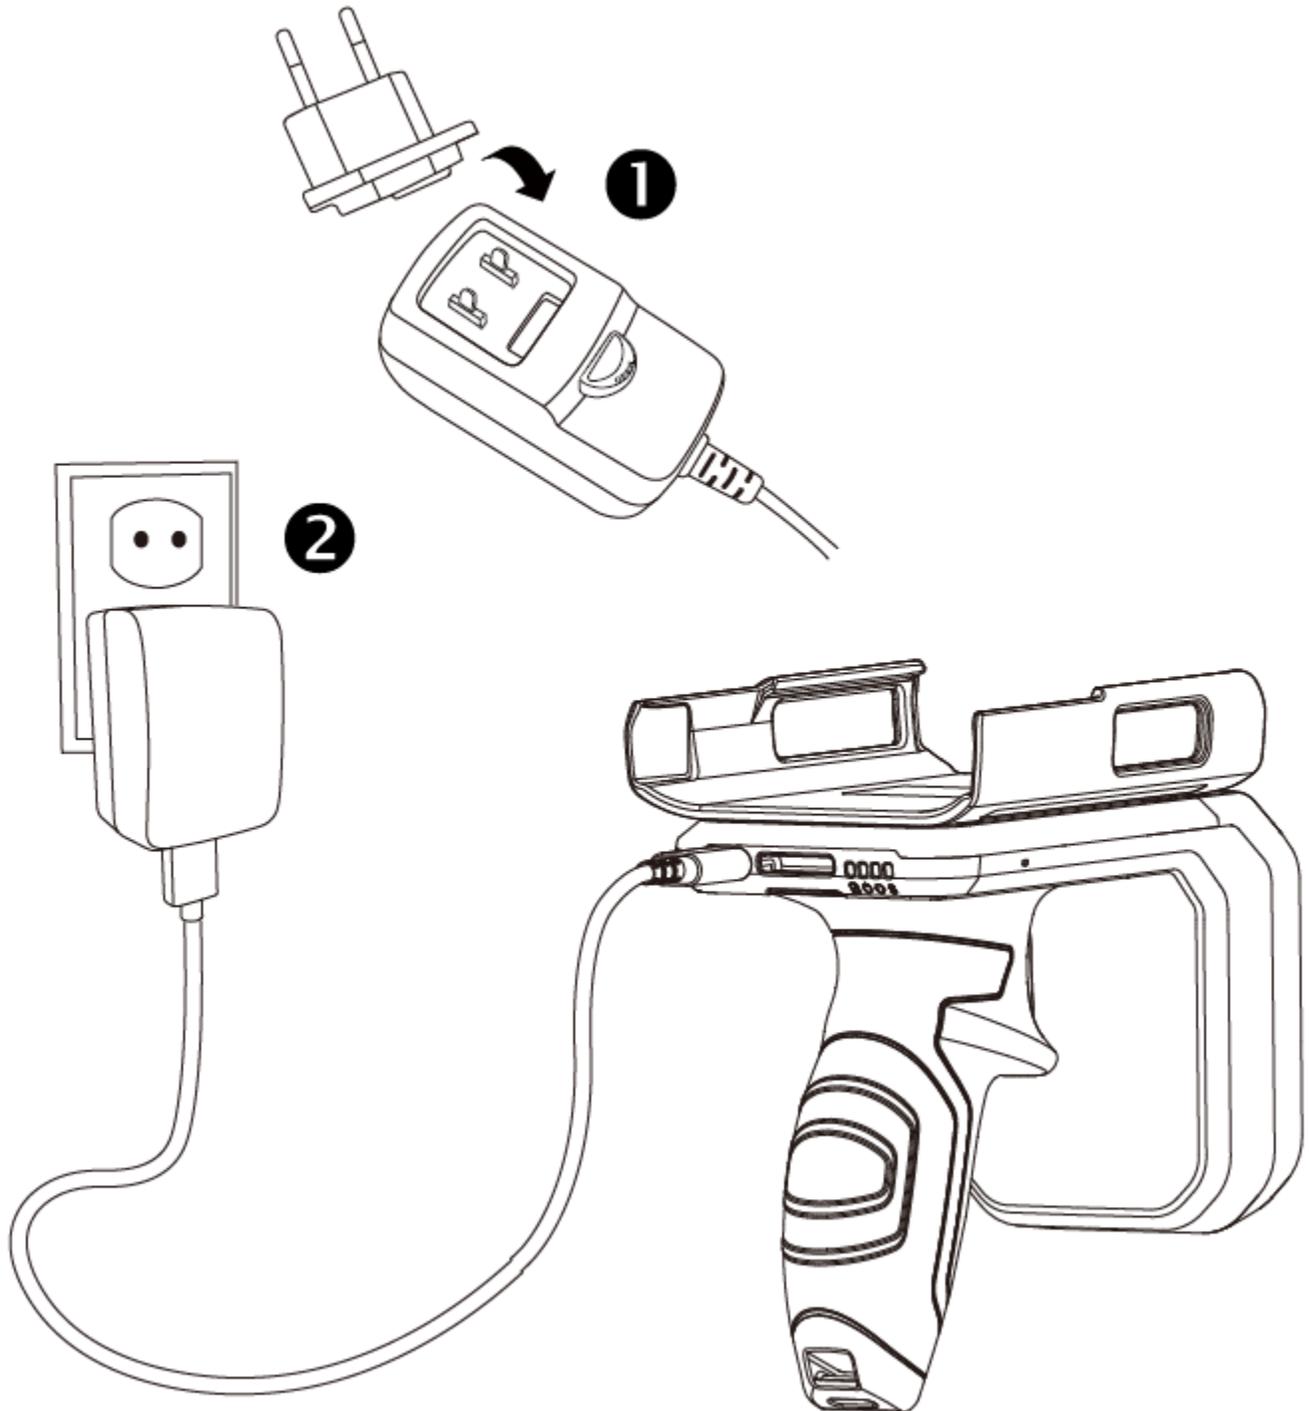

Charge RF800

Getting Started

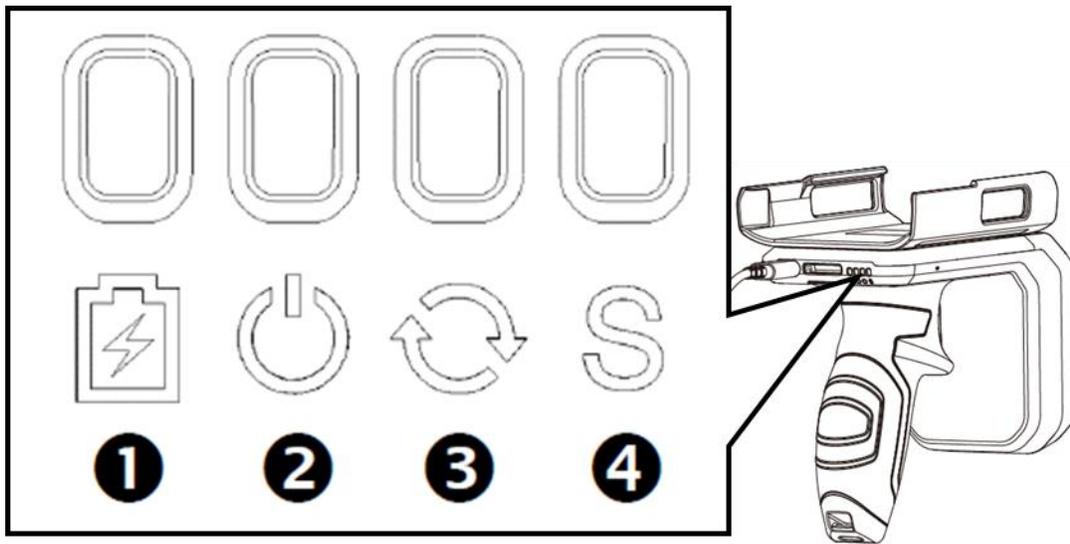


1. Charging LED	Solid Red Solid Green	Battery is charging Battery is fully charged
2. Power LED	Solid Red Blinking Red Solid Green Blinking Green Solid Orange Blinking Orange	Power is On Power is low BT is connected BT is connected and power is low USB connected to PC USB connected to PC and power is low
3. Mode LED	Red Green Orange	BT SPP connected BT HID connected Connected to BT pairing app or USB connected
4. Status LED	Red Green	UHF RFID ready Barcode scan ready

Note: Always use an original charger and cable from the Point Mobile. Other chargers and cables may damage RF800. In addition, make sure connector, charger, cables are not wet.

Install PM80 to RF800

Getting Started

1. Place the left or right side of the PM80 on the RF800's guide first

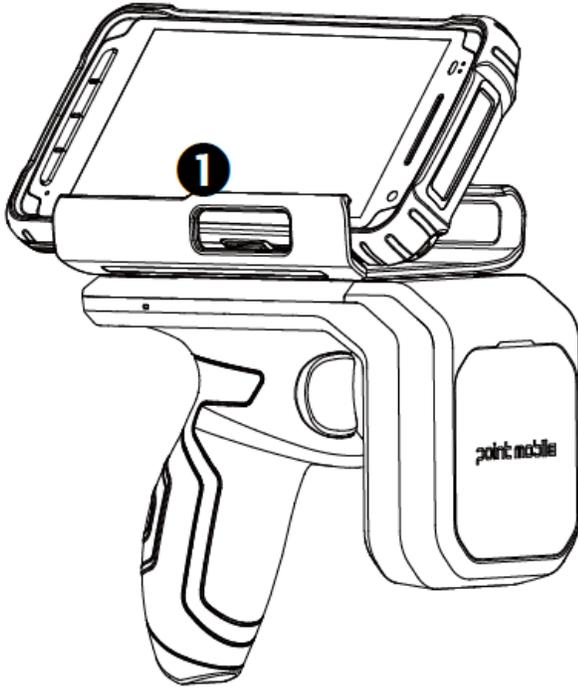

2. Push down the other side of the PM80 firmly




Install the RF800 Demo App

Learning the basics

For RF800 demonstration, please download and install the RF800 Demo app from Google Play




- Access to Google Play and search RF800
- Touch **INSTALL** button for app download and installation

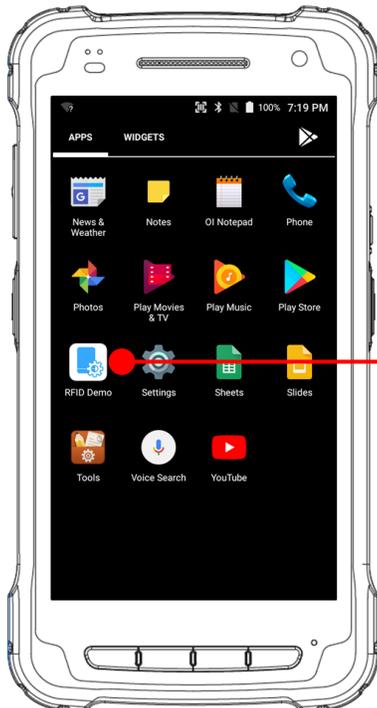

After app installation, you will see RF800 Demo App icon in the app drawer

Bluetooth Pairing with RF800

Learning the basics

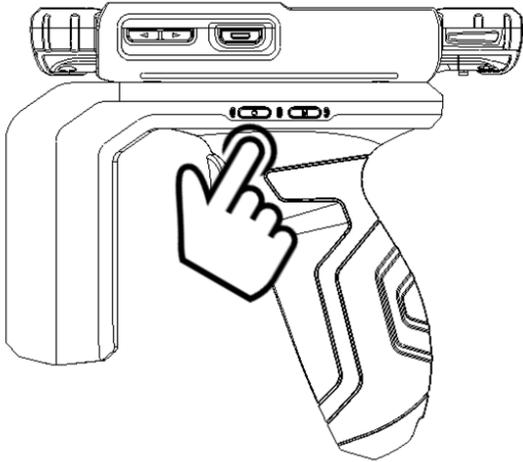


Turn on the RF800
You will hear turn on sound with vibration




Launch the RF800 Demo App to make a connection with
RF800

Bluetooth Pairing with PM80

Learning the basics

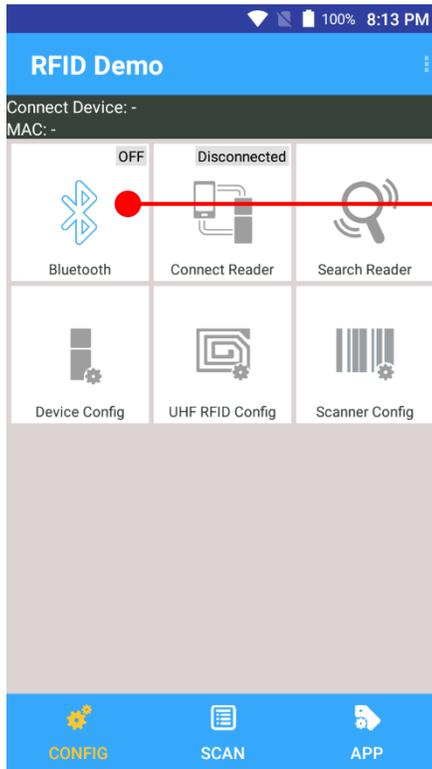


Touch the **Bluetooth** icon in the Demo App to enable the Bluetooth function in PM80

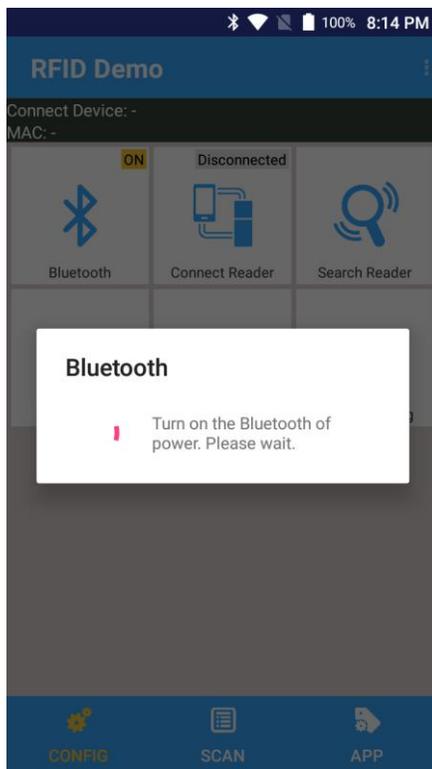


Bluetooth Pairing with PM80

Learning the basics

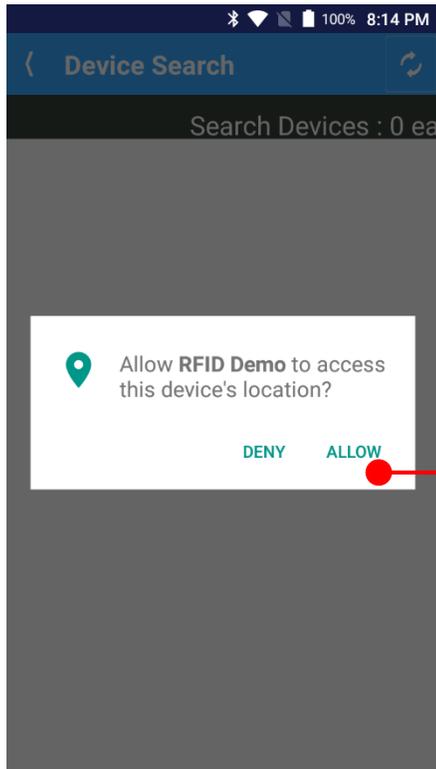

Touch the **Search Reader** icon in the Demo App


You may give location access permission. Please touch **ALLOW** button

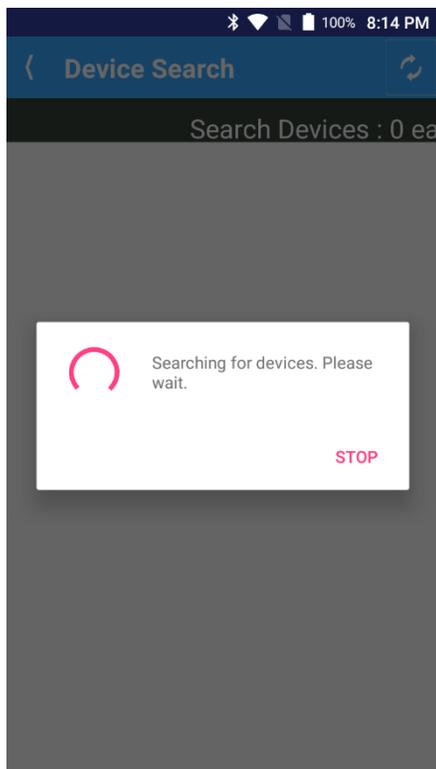


Demo App will search nearby RF800 device

Bluetooth Pairing with PM80

Learning the basics

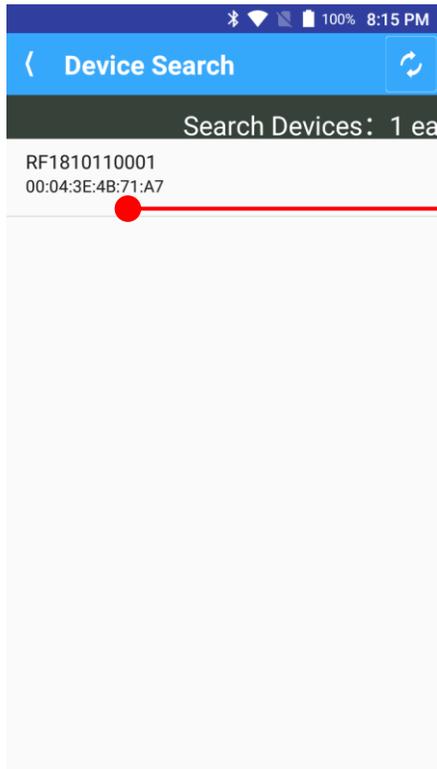



Now Demo app list up nearby RF800 device with Serial number and Bluetooth MAC address information. Please touch the RF800 device among the list

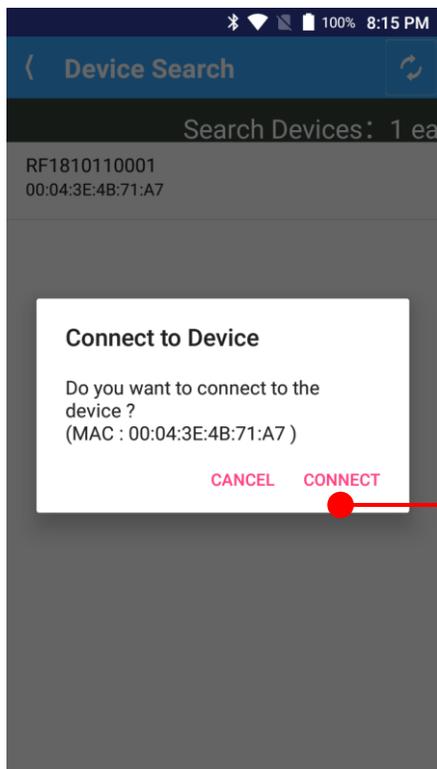

Touch **CONNECT** button to pair PM80 and RF800

Bluetooth Pairing with PM80


Learning the basics

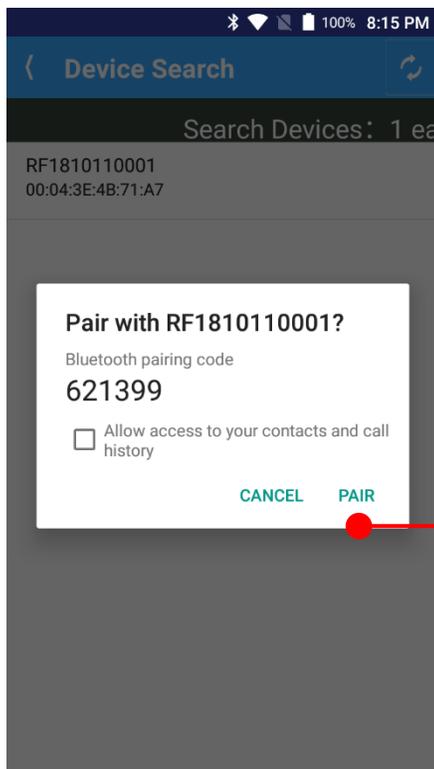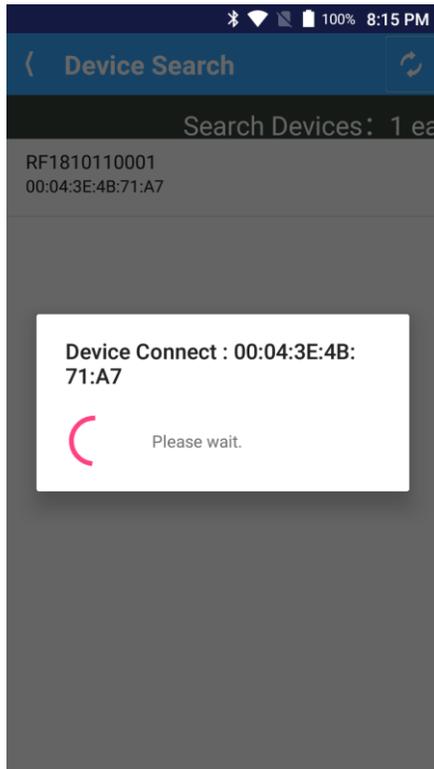

Touch **PAIR** button
After connection, you will hear connection made sound

Bluetooth Pairing with PM80


Learning the basics

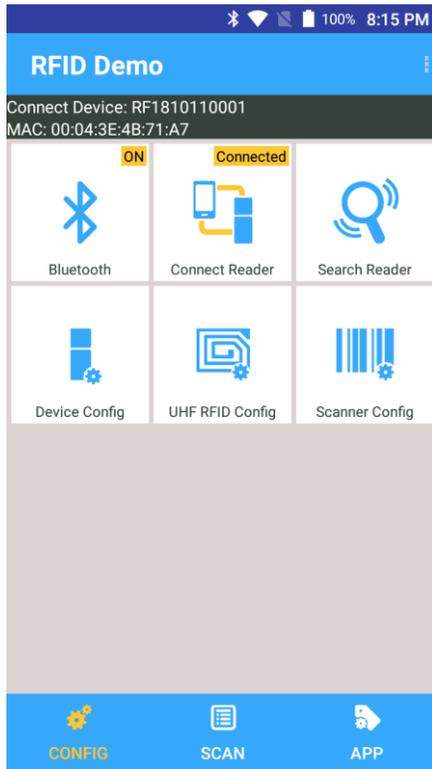


Now PM80 and RF800 paired via Bluetooth

RF800 Demo App Settings

Learning the basics

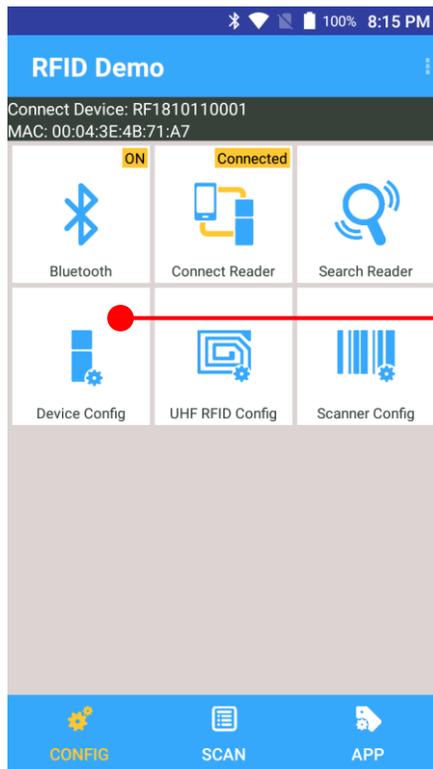


In Config tab, user can set RF800's detail settings

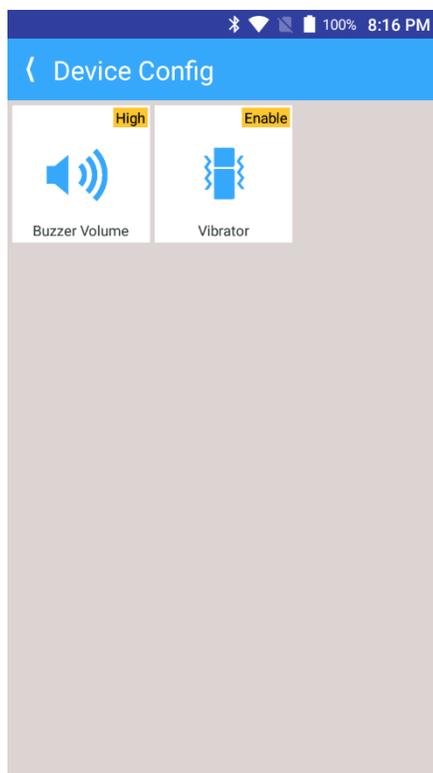


In **Device Config** menu, user can change notification volume and vibration option

RF800 Demo App Settings

Learning the basics

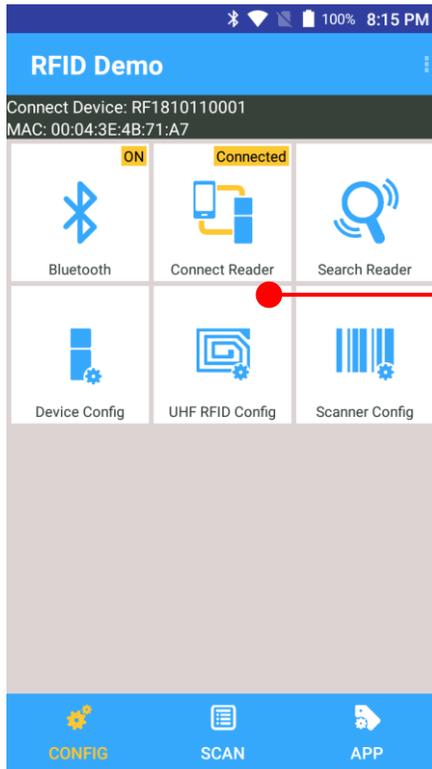


Please touch **UHF RFID Config** menu

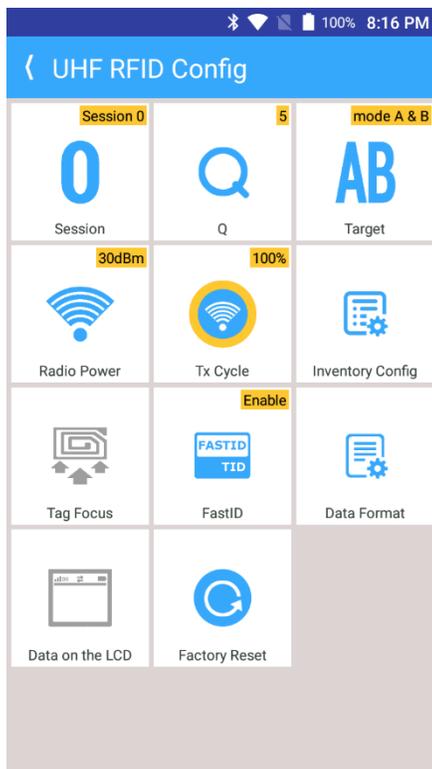


In **UHF RFID Config** menu, user can change RF antenna setting, RFID reading mode and Data Format

RF800 Demo App Settings

Learning the basics

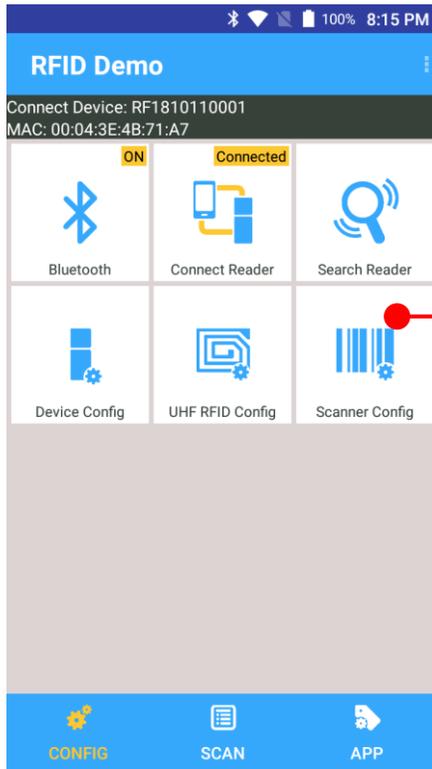


Please touch **UHF RFID Config** menu

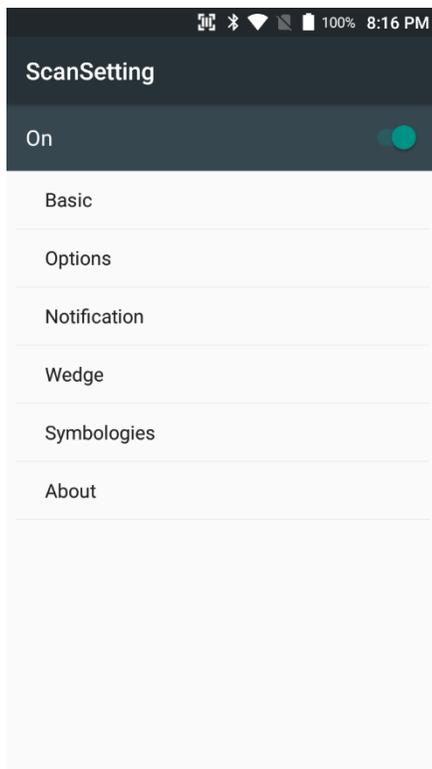


In **Scanner Config** menu, user can set PM80's scanner settings (Notification, Scan Wedge and Barcode Symbolologies)

RFID Tag reading

Learning the basics

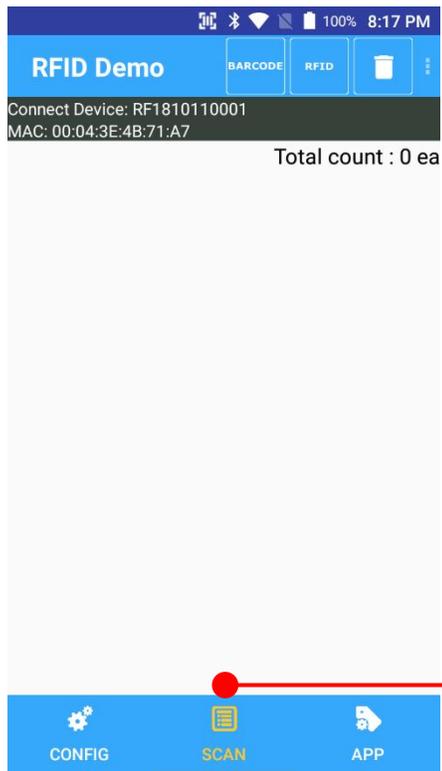

To read RFID tag, please move to **SCAN** tab in the bottom menu

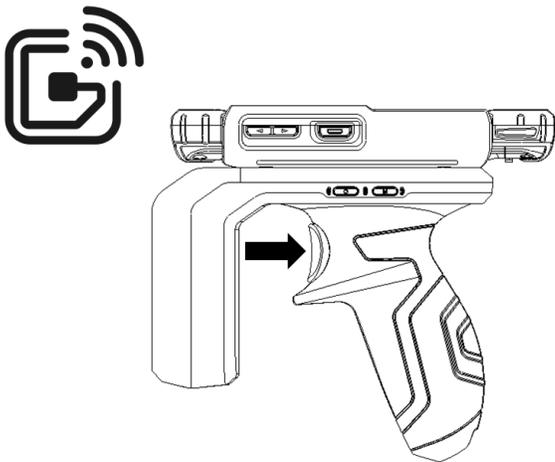


Aim the RFID tag and press the trigger button

Read RFID

Learning the basics




Demo app will display RFID tag information

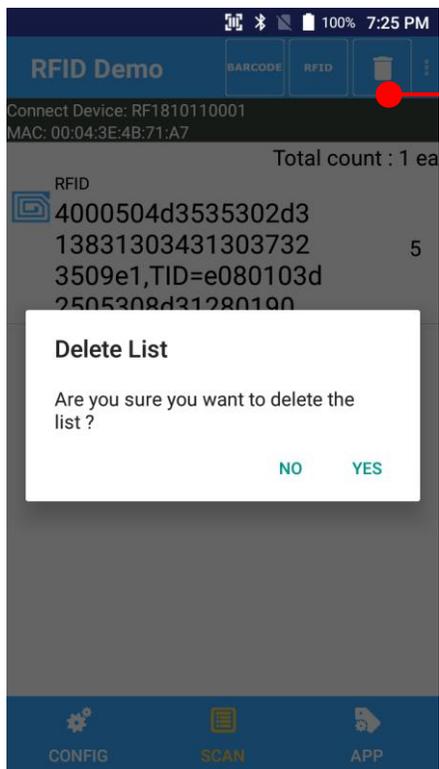

To delete RFID tag information, please touch trash icon


Barcode reading

Learning the basics

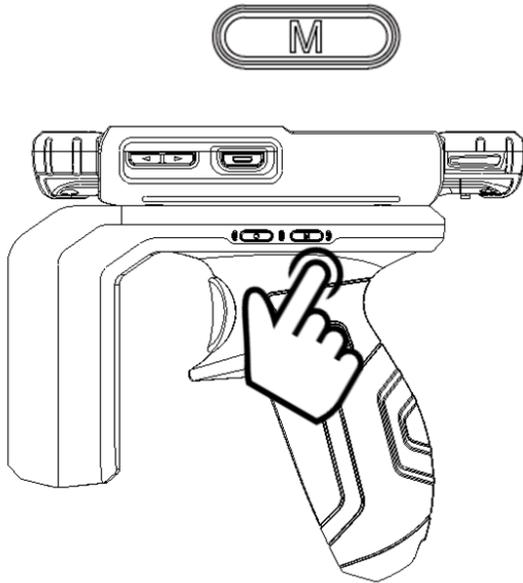

To read barcode, press **Mode** button in the side.

Note: Mode button changes RFID tag reading mode and Barcode reading mode.

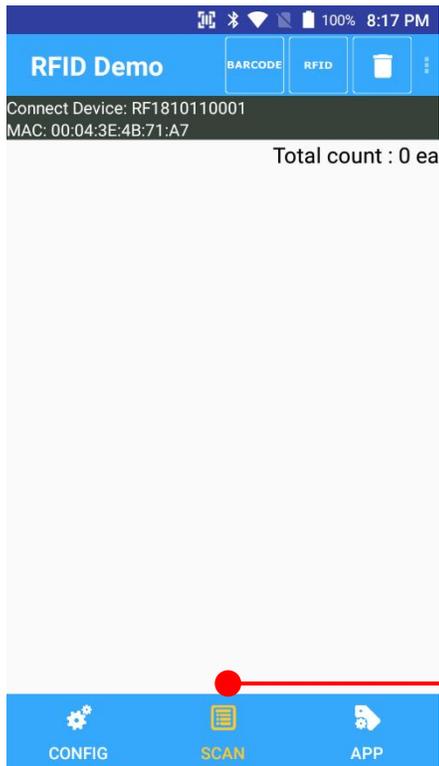


To read barcode, please move to **SCAN** tab in the bottom menu

Barcode reading

Learning the basics



Point Mobile

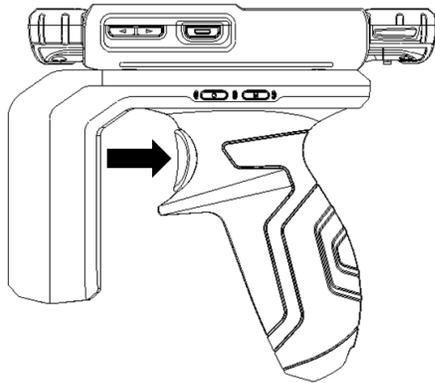

Aim the Barcode and press the trigger button

Example of good Barcode reading



Point Mobile

Please aim the middle of barcode



Point Mobile

Even you aim the barcode slightly upper or down area or angle is slightly tilted, you can read the barcode



Point Mobile


Barcode reading

Learning the basics



Example of bad Barcode reading


If you aim the barcode wrong direction or tilt too much, you can't read the barcode

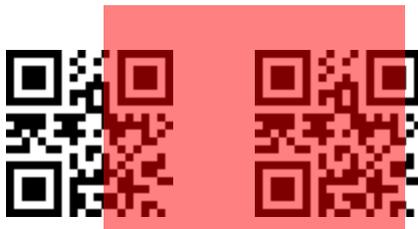


If you aim part of Barcode or aim two barcodes together, you can't read the barcode

Barcode reading

Learning the basics

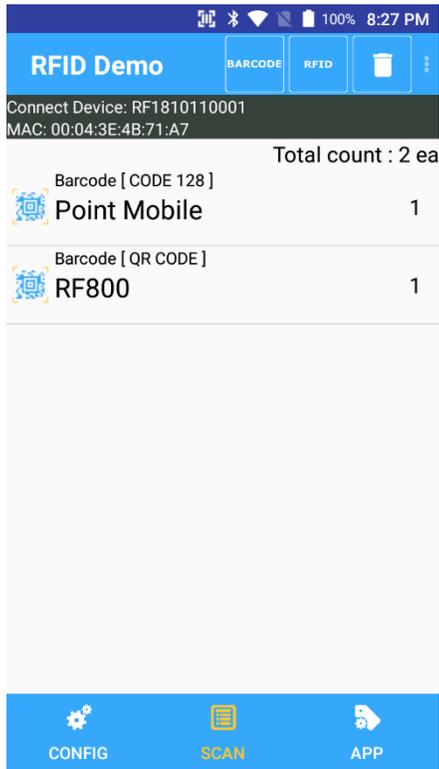

Demo app will display Barcode information

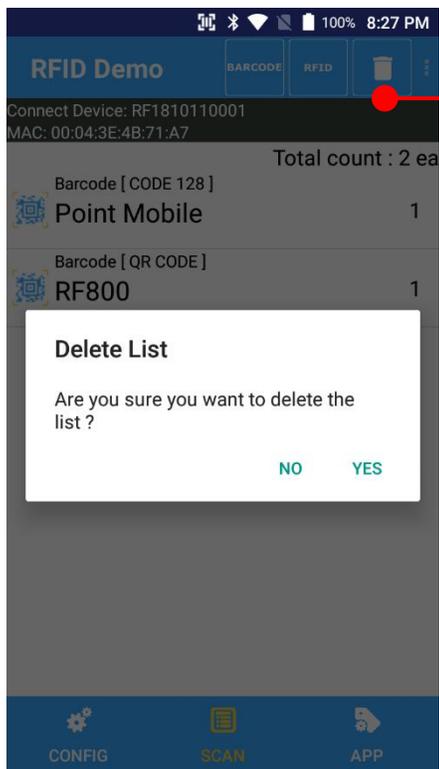

To delete Barcode information, please touch trash icon



POINT MOBILE. CO., LTD.

Offline

Tel: +82-2-3397-7870~1

ARS: +82-1800-3010

Fax: +82-2-3397-7872

Address: B-9F Kabul Great Valley, 32, Digital-ro 9-gil,
Geumcheon-gu, Seoul, Korea 08512

Online

Website: <http://www.pointmobile.co.kr/>

E-mail: pm_support@pointmobile.co.kr