

Wireless Barcode Scanner User's Manual

Introduction

Wireless barcode scanner transfer the data to computer via receiver.

If scanner & receiver need to re-pair, scan the "Pairing Function".

LED Description

Red

- ◆ Charging: Light on
- ◆ Charging finished: Light off

Green

- ◆ Slow flash: Scanner is not connected to receiver or USB
- ◆ Flash: Scanner is connected to receiver or USB
- ◆ Quick flash: Entering the pairing mode
- ◆ Flash once : Data upload successfully

Buzzer Description

- ◆ Long & high beep: Switch on
- ◆ Twice high & low beeps: Switch off, setup code or decoding success
- ◆ A medium long & high beep: good scan or pairing up receiver
- ◆ Three continuous short beeps: Alarm prompt

Default Setting



Note: With (*) is the factory default.

Data Transfer Mode



*Immediate



Automatic Storage

Note: Automatic storage mode. Data is automatically saved in scanner when exceed communication distance, scan the "Upload all data" code to complete the data transfer.



Inventory

Note: Inventory mode, the scanned barcode will be automatically saved in scanner. If the data need to be viewed or uploaded, then scan the "Upload all data" code to complete the data transfer.



Upload all data



Clear all data

Note: Clear all data can be effective under Inventory mode & Automatic Storage mode.



Display stored data

USB Interface Type



*USB-HID



USB-COM

Note: The USB interface type of both scanner and receiver will be changed.

**Below is for Bluetooth scanner only.
Device named: BLE-HID**

Wireless Bluetooth Setting



*2. 4G



Bluetooth



Bluetooth serial port

Note: Scan the bluetooth code change to bluetooth mode. When the scanner is restored, for bluetooth mode scan the code again.

Bluetooth HID transmission rate



Fast



*Medium



Low

IOS show/hide the Keyboard (Under Bluetooth mode)



Show or Hide



V9.8.3

☒ Pairing Function



Note: Scan this code, scanner will enter the automatic pairing mode for 1 minute, then re-insert the receiver. There will be a sound heard when pairing successfully.



Bluetooth HID Pairing

For Bluetooth pairing setting, search by Bluetooth device

☒ Battery Display



Display battery capacity

Note: Percentage display

☒ Sound Settings



Mute



*High



Medium



Low



MCU voice



*Sensor voice

☒ Sleeping Settings (2 Types)

Different Sleeping time choices:



Immediate sleep



10s



30s



*1min



2min



5min



10min



30min

☒ Language Settings



*USA



Germany



France



Italy



Canada



Spain



Brazil



Sweden



Portugal



Turkey-F



Universal language



Belgium



Turkey-Q

☒ Terminator



NONE



*CR



LF



TAB



CR/LF

☒ Display Version



Software version