

Package contents



- Device
- Stylus pen with Tether
- AC/DC Adaptor
- Battery
- Wrist Strap
- LCD protection film

Device layout

Front



Device layout

Back(MSR)




Device layout

Back(Non-MSR)




Device layout

Up/down & sides

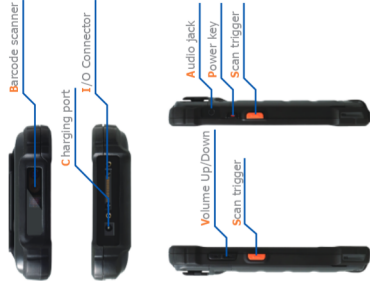


Menu keys

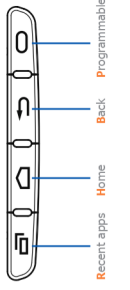


- Recent apps key**
 - Tap to open the list of recent apps.
- Home key**
 - Press to return to the Home screen while running apps
 - Press to return to the Home screen from other screens
 - Press and hold to launch internet
- Back key**
 - Tap to return to the previous screen or to close current screen (dialog box, option menu, notification panel, etc)
- Programmable key**
 - Press to set functions on keys
 - Press to create shortcut of programs

Installing battery

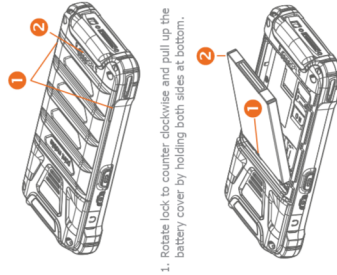

Removing battery

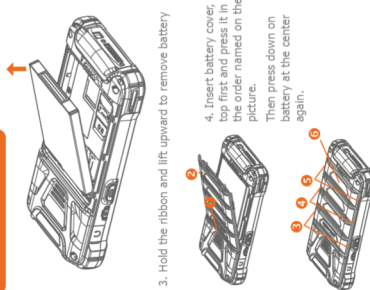

Hotswap

- To replace the battery during your device usage, please press and hold the power button. Then you will see pop up window as below
-
- Select 'Hot swap' among the menu
- Hot swap battery
 - Waiting for red LED to turned off and change the battery
 - OK
- Tip 'OK' and wait until red LED turned off
 - Replace the battery
 - By pressing the power button, device will turn on.
- Note :** If you don't replace the battery within one minute, the device will reboot after your battery replacement.


Installing/ Removing Micro SD card



- Installing Micro SD card**
 - Remove battery from device and Insert Micro SD card.
 - Insert battery again after installing Micro SD card.
- Removing Micro SD card**
 - Press Micro SD card
 - Rotate Micro SD card from device.
 - Insert battery again.

- <Caution>**
 - Micro SD card is not standard/optional accessory. Do purchase it from distributor.
 - Device supports storage extension upto 32GB with Micro SD card.
 - Turn off the device before removing battery.

Charging the battery

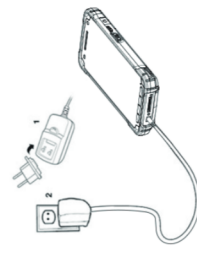

Insert plug on AC/DC Adaptor and connect to electric socket to charge. LED indicator on upper left of device shows red light while charging and it turns to green light when the device is fully charged.

- <Caution>**
 - Use only items provided in your purchase for charging.
 - You can also charge the device with optional accessory, cradle

Standard accessory

5V 2A AC/DC Adaptor



AC plug(US/EU/UK)



LCD protection film



3000/4000mAh battery



Stylus pen with Tether



Wrist Landyard



Optional accessory

SSC(Single Slot Cradle)



45C(4 Slot Cradle)



45BC(4 Slot Battery Charger)



I/O Sync Connector



Bumper with handstrap



Setting the date and time


Go to below route to set date and time.

Settings -> Date and time -> Unlock automatic date & time, Unlock automatic time zone

Access to above route and alter the following settings according to user's decision.

- Set date
- Set time
- Select time zone
- Use 24-hour format
- Select date format

Connecting to PC

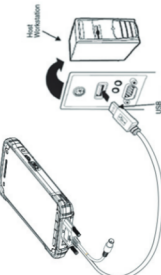

Connecting USB data Sync cable

Connect to PC and transfer data in Micro SD card/ device storage with I/O USB data Sync cable.

Connecting

- connect USB cable to USB port of PC and I/O connector.
- Tab media device connection on notification panel of status bar.
- Select file transfer on pop up window.

Disconnecting

- Tab to show notification panel and select media device connection.
- Connect media device (MTP) and disable the connection.

Scanning

Testing barcode scanner



1. Open Demos folder on home screen.
2. Tap ScanDemo to run.
3. Press both scan keys at once or any of scan key on the device to scan barcode.
4. Scanned barcode data will show on screen as well as the scanned barcode on the picture left.

Point the scanning beam at the center of barcode and keep scanning angle vertical to it.
Scanning range varies according to bar code size so keep minimum distance for small barcode and further distance for bigger one.

Scanning: aiming pattern

Up/ down & sides



Resetting the device

Reboot

Press and hold power key for 3 seconds and select Reboot on options to reboot the device.

Settings -> back up and reset -> Factory reset -> Reset phone

Factory reset

Follow the process by tapping next button to complete factory reset.

<Caution>

- Back up all data - personal, application settings, account information and etc. before performing factory reset as it causes all data delete.

Technical support & A/S

Offline

Tel: +82-2-3397-7979
Fax: +82-2-3397-7177
Address: 6-9F Kibul Great Valley, 32, Digital-ro 9-gil, Geumcheon-gu, Seoul, Korea 08512

Online

Website: <http://www.pointmobile.co.kr/>

E-mail: pm_sales1@pointmobile.co.kr

For more information

Please refer to the usual guide for more information on safety & regulations of device and accessories.

Certification

Equipment name: Mobile computer
Model: P160
Trade name of certified: POINT MOBILE CO.LTD
Manufacturer/ Country of origin: POINT MOBILE CO.LTD/China

Standard features

Item	Specifications
Form factor	PH60
OS	Android 6.0.1 (Marshmallow)
Main Processor	Qualcomm Snapdragon Quad-core up to 1.6GHz
Memory (RAM/ROM)	16/32MB (16/32GB) (Expandable)
Display	5.0" Widevine range (FHD 1920x1080 pixels)
Camera	20.0 mega-pixels
Audio	Built-in microphone and speaker
I/O	High speed USB 2.0 from cradle (for I/O cable)
Battery	2795 / 2910mAh model with battery
Mobile network	4G LTE (FDD, TDD, TD-LTE)
Bluetooth	Bluetooth 4.2, BLE, A2DP, AVRCP, L2CAP
Wi-Fi	802.11a/b/g/n
GPS	Qualcomm GPS
Operating temperature	-20°C ~ 60°C
Storage	16GB

Wireless Specification (Frequency)

WLAN

- 802.11b/g/n: 2412~2472MHz
- 802.11a/n: 5180~5240, 5260~5320, 5500~5620, 5745~5805MHz

Bluetooth

- BT4.2 + BR/EDR + BLE: 2402~2480MHz

WCDMA

- Band 1 (TX): 1920~1980MHz, (RX): 2110~2170MHz

LTE

- Band 1 (TX): 1920~1980MHz, (RX): 2110~2170MHz
- Band 3 (TX): 1710~1785MHz, (RX): 1805~1880MHz
- Band 7 (TX): 824~849MHz, (RX): 869~894MHz
- Band 7 (TX): 2500~2570MHz, (RX): 2620~2690MHz
- Band 8 (TX): 880~915MHz, (RX): 925~960MHz

Allowed to use in all area.
Please use the device at 1 cm or more distance away from your body.