



**DURABOOK**

**U12Ci**  
User's Manual

# Table of Contents

COPYRIGHT .....	4
REGULATORY STATEMENT .....	4
<i>Federal Communications Commission Statement</i> .....	4
<i>Declaration of Conformity</i> .....	4
<i>RF exposure warning</i> .....	5
<i>Canada, Industry Canada (IC) Notices</i> .....	5
<i>Battery Disposal</i> .....	6
<i>CLASS 1 LASER PRODUCT</i> .....	6
SAFETY INSTRUCTIONS .....	7
<b>BEFORE YOU START .....</b>	<b>9</b>
PACKAGE CONTENTS .....	9
COMPONENTS .....	10
<i>Front View</i> .....	10
<i>Left View</i> .....	12
<i>Right View</i> .....	12
<i>Back View</i> .....	13
<i>Bottom View</i> .....	14
<i>Status Indicators</i> .....	15
<b>GETTING STARTED .....</b>	<b>16</b>
POWERING UP YOUR NOTEBOOK .....	16
<i>Connecting the AC Adapter</i> .....	16
<i>Using Battery Power</i> .....	16
INSTALLING THE BATTERY.....	17
<i>Charging the Battery</i> .....	17
<i>Checking the Battery Level</i> .....	17
<i>Removing the Battery</i> .....	18
STARTING YOUR NOTEBOOK .....	18
<i>Using the Display Panel</i> .....	18
<i>Turning On Your Notebook</i> .....	19
<i>Adjusting the LCD Panel Brightness</i> .....	19
<i>Changing the Display Orientation</i> .....	20
<i>Shutting Down Your Notebook</i> .....	20
USING THE KEYBOARD .....	21
USING THE TOUCH PAD .....	22
USING THE STYLUS.....	23
<i>Calibrate the Screen</i> .....	23
USING THE QUICK MENU .....	25
USING THE MEMORY CARDS .....	26
<i>Inserting a Memory Card</i> .....	26
<i>Removing a Memory Card</i> .....	26

<b>MAKING CONNECTIONS .....</b>	<b>27</b>
CONNECTING EXTERNAL DISPLAY DEVICES .....	27
<i>Connecting a Projector or Display Monitor .....</i>	<i>27</i>
<i>Connecting a TV .....</i>	<i>27</i>
CONNECTING USB DEVICES .....	28
CONNECTING HEADPHONES .....	29
CONNECTING EXTERNAL MICROPHONE .....	29
CONNECTING TO A LOCAL AREA NETWORK (LAN).....	30
CONNECTING AN EXTERNAL SATA HDD .....	30
CONNECTING TO WIRELESS CONNECTIONS .....	31
<i>Connecting to a Wireless Local Area Network.....</i>	<i>31</i>
<i>Connecting to a Bluetooth Device .....</i>	<i>32</i>
 <b>POWER MANAGEMENT .....</b>	 <b>34</b>
USING THE POWER PLAN .....	34
USING THE POWER SAVING MODE .....	35
 <b>USING THE BIOS SETUP UTILITY .....</b>	 <b>36</b>
BIOS SETUP MENU .....	36
STARTING THE BIOS SETUP UTILITY .....	36
NAVIGATING AND ENTERING INFORMATION IN BIOS.....	36
MAIN MENU .....	37
ADVANCED MENU .....	37
BOOT MENU .....	38
SECURITY MENU .....	38
SAVE & EXIT MENU .....	39
 <b>TROUBLESHOOTING.....</b>	 <b>40</b>

# Copyright

Copyright© 2013. All rights reserved.

No part of this user manual may be transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of the manufacturer. Information is subject to change without prior notice.

# Regulatory Statement

## **Federal Communications Commission Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables and shielded AC power cable must be employed with this equipment to insure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

## **Declaration of Conformity**

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

### **RF exposure warning**

This equipment must be installed and operated in accordance with provided instructions and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

SAR Value: 1.53 W/kg

This device is operation in 5.15 – 5.25GHz frequency range, then restricted in indoor use only, Outdoor operations in the 5150~5250MHz is prohibit.

This device is slave equipment, the device is not radar detection and not ad-hoc operation in the DFS band.

### **Canada, Industry Canada (IC) Notices**

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

### **Radio Frequency (RF) Exposure Information**

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has been evaluated for and shown compliant with the IC Specific Absorption Rate ("SAR") limits when installed in specific host products operated in portable exposure conditions.

### **Canada, avis d'Industry Canada (IC)**

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210.

Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

### **Informations concernant l'exposition aux fréquences radio (RF)**

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal.

## Preface

---

Ce périphérique a été évalué et démontré conforme aux limites SAR (Specific Absorption Rate – Taux d'absorption spécifique) d'IC lorsqu'il est installé dans des produits hôtes particuliers qui fonctionnent dans des conditions d'exposition à des appareils portables.

### Battery Disposal

THIS PRODUCT CONTAINS A LITHIUM-ION OR NICKEL-METAL HYDRIDE BATTERY. IT MUST BE DISPOSED OF PROPERLY. CONTACT LOCAL ENVIRONMENTAL AGENCIES FOR INFORMATION ON RECYCLING AND DISPOSAL PLANS IN YOUR AREA.

### CLASS 1 LASER PRODUCT

 
#### LASERSCHUTZKLASSE 1 PRODUKT TO EN60825

**CAUTION:** THIS APPLIANCE CONTAINS A LASER SYSTEM AND IS CLASSIFIED AS A "CLASS 1 LASER PRODUCT." TO USE THIS MODEL PROPERLY, READ THE INSTRUCTION MANUAL CAREFULLY AND KEEP THIS MANUAL FOR FUTURE REFERENCE. IN CASE OF ANY TROUBLE WITH THIS MODEL, PLEASE CONTACT YOUR NEAREST "AUTHORIZED SERVICE STATION." TO PREVENT DIRECT EXPOSURE TO THE LASER BEAM, DO NOT TRY TO OPEN THIS ENCLOSURE.

### *ANNEX IV*

#### Symbol for the marking of electrical and electronic equipment

The symbol indicating separate collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown below. The symbol must be printed visibly, legibly and indelibly.

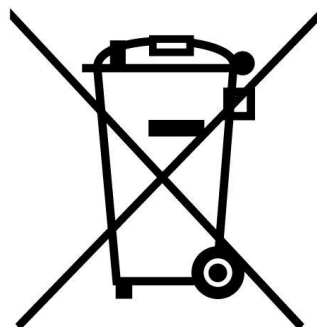

---

# Safety Instructions



DO NOT block the opening vents provided for ventilation. Blocking these vents may cause the notebook processor to overheat.



Always keep strong magnetic or electrical objects away from your notebook.



DO NOT use or store your notebook in extreme temperatures.



DO NOT place your notebook near fire or other sources of heat.



DO NOT expose to dust or corrosive materials.



DO NOT tamper the battery. Keep it away from children.



Never pick up or hold your notebook by the display.



DO NOT expose your notebook to sudden changes in temperature or humidity. Keep your notebook away from air conditioners or heating vents.



DO NOT attempt to service your notebook yourself. Any attempt to do so will make the warranty invalid.  
When servicing, refer to qualified service personnel.



For better environmental protection, waste batteries should be collected separately for recycling or special disposal.



### **CAUTION FOR ADAPTER**

THIS NOTEBOOK IS FOR USE WITH DEDICATED AC ADAPTER.

### **BATTERY SAFETY**

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.  
REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.



# Before You Start

Congratulations on your purchase of this notebook.

This business notebook is portable and suits a wide-range of user requirements, providing users with maximum computing experience. Before you begin using your notebook, read this chapter to familiarize yourself with the main components installed in the system.

## Package Contents

The following items come with your package. If any of them is damaged or missing, please contact your retailer.



Notebook



Power adapter



Power cord



Stylus Pen



Utility DVD



### NOTE

- The pictures are for reference only, actual items may slightly differ.

# Components

## Front View

 


No.	Item	Description
1	Camera	Use to take picture, record videos, or video conference.
2	Display panel	Provides visual output.
3	Fingerprint scanner	Scans fingerprints for biometric identification.

No.	Item	Description
4	Brightness control button	Press to increase the LCD panel brightness by one level.
5	Brightness control button	Press to decrease the LCD panel brightness by one level.
6	SAS button	Press to exit Windows and switch to Standby mode.
7	Power button	Press to turn your notebook on or off.
8	Quick menu button	Press to access the quick menu.
9	LCD direction button	Press to rotate the screen orientation.
10	Program button	Press to start playback of chosen program.
11	Stealth mode button	Press to disable all emitting lights and sound.
12	Status Indicators (Power, Wireless, HDD, Caps Lock, Num lock, Battery)	Indicates the corresponding function status.
13	Keyboard	Press the keys to input information.
14	Touch pad	Use to point, select, drag, or scroll objects on the screen.
15	Touch pad button	Press to select objects or display a shortcut menu.
16	Chassis latch	Locks the notebook chassis.
17	Handle	Use for carrying the notebook around on-the-go.


## Before You Start

### Left View

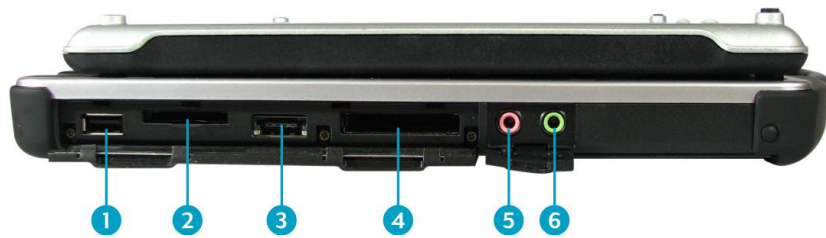


No.	Item	Description
1	USB port	Connects USB peripheral devices.
2	Card reader	Use to insert memory cards to transfer pictures, music, and data between your notebook and flash compatible devices. The card reader supports SD (Secure Digital), SDHC, Mini-SD (with adapter), MMC (Multi-media card), MMC+, Mini-MMC (with adapter) cards.
3	eSATA/USB Combo port	Connects an external hard disc drive using an eSATA cable for faster data transfer, or a USB cable for USB peripheral devices.
4	ExpressCard slot and PC Card slot	Use to insert one 34/54 ExpressCard or Type II PC Card.
5	Microphone jack	Connects an external microphone.
6	Headphone jack	Connects headphones or external speakers.

### Right View

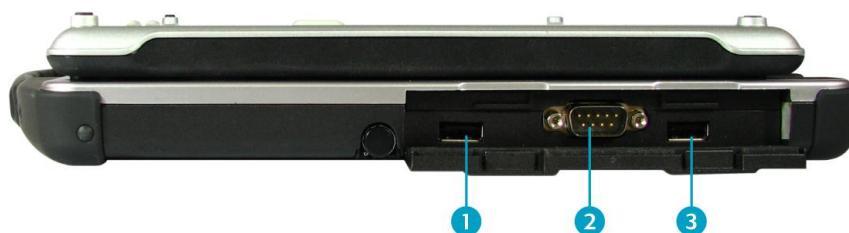 


No.	Item	Description
1	USB port	Connects USB peripheral devices.
2	Serial port (RS232)	Connects a peripheral device, such as a printer or other device with serial port.
3	USB port	Connects USB peripheral devices.

 Back View

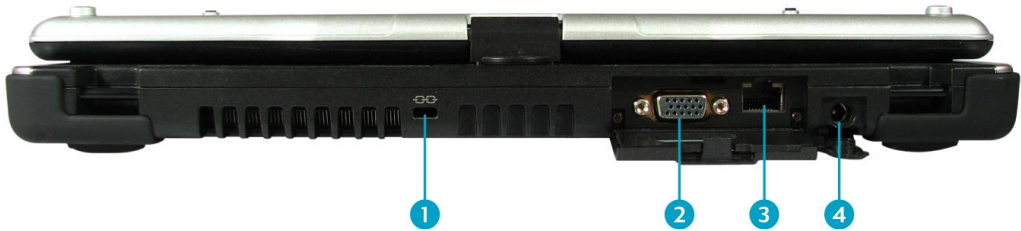

No.	Item	Description
1	Kensington lock slot	Connects to a Kensington-compatible notebook security lock.
2	VGA port	Connects to a display device. (e.g. external monitor, LCD projector).
3	LAN (RJ-45) port	Connects to a local area network (LAN) using an Ethernet cable.
4	DC-in jack	Connects the power adapter.

 Bottom View

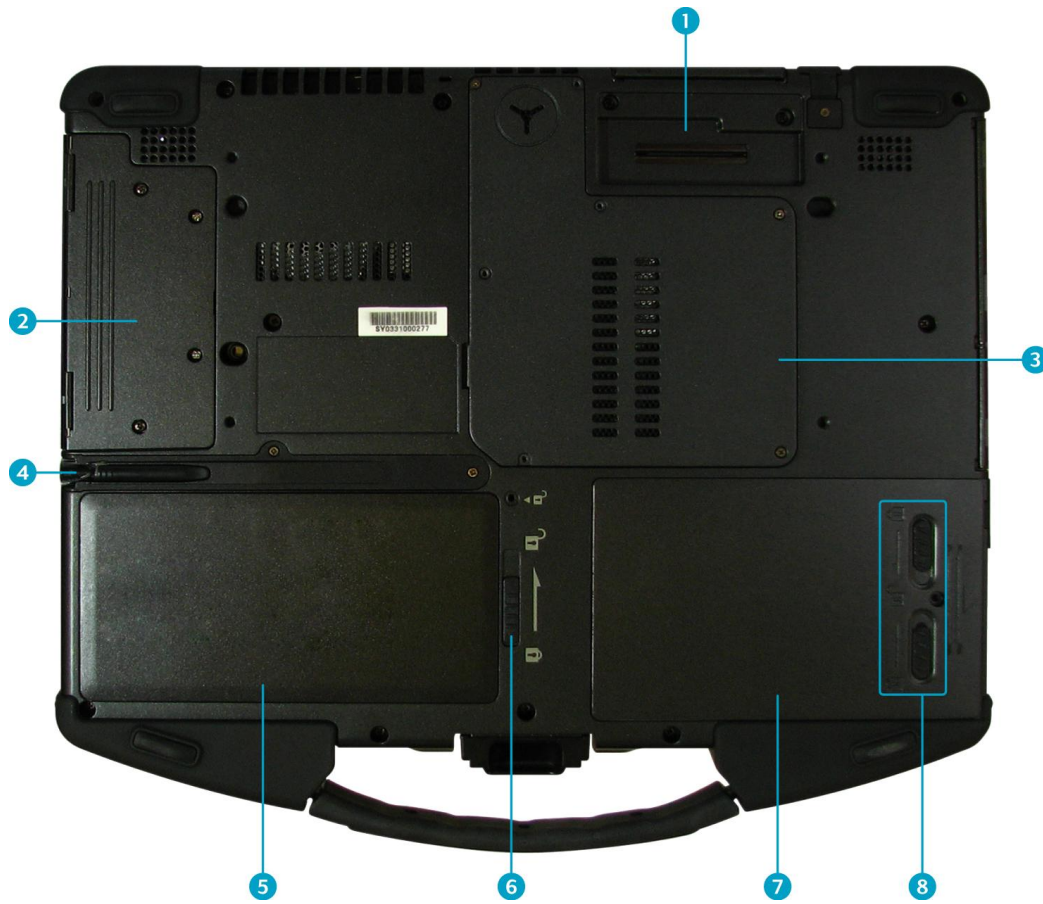







No.	Item	Description
1	Docking connector	Connects the notebook to a docking station. You can also use this connector for the second battery.
2	Modular I/O port bays	Use for user changeable modular I/O bay to accommodate various devices applications.
3	Cooling vents	Use for air convection. Do not cover the cooling vents to protect your notebook from overheating.
4	Stylus	Use for accurate control input to the LCD touch panel and digitizer.
5	Battery compartment	Contains the battery.
6	Battery latch	Locks the battery in place.
7	Hard disk drive (HDD) compartment	Contains the hard disk drive.
8	HDD latches	Locks the HDD in place.



## Status Indicators

The status indicators in the upper left corner of the keyboard light up when a particular function of the notebook is active. Each indicator is marked with a symbol.



Icon	Item	Description
	<b>Power indicator</b>	The LED always lights on (blue) when the system is running. When the system is in sleep mode, the LED will blink.
	<b>WLAN</b>	Indicates the status of wireless LAN communication.
	<b>HDD</b>	A blinking HDD LED indicates HDD activity (data is being read or written).
	<b>Num Lock</b>	Lights on when Num Lock is activated.
	<b>Caps Lock</b>	Lights on when Caps Lock is activated.
	<b>Battery</b>	<p>Indicate the battery status:</p> <ul style="list-style-type: none"> <li>• Green: The battery is fully charged or the charging current is 0 for more than 3 minutes with the battery capacity higher than 95%.</li> <li>• Blinking green: The system is calibrating the battery.</li> <li>• Orange: The battery is being charged.</li> <li>• Blinking orange: The battery is being charged but the battery temperature is out of charging range (0~60°C), the battery is being charged for more than 10 hours, or the charging current is 0 for more than 3 minutes with the battery capacity lower than 85%.</li> <li>• Blinking red: The battery power is low (less than 7%).</li> <li>• Off: The battery is discharged.</li> </ul>

# Getting Started

This chapter will guide you on how to use your notebook.

## Powering Up Your Notebook

Your notebook can be powered up using the AC adapter or the Lithium-ion battery.

### Connecting the AC Adapter

The AC adapter powers up your notebook and charges the battery.



1. Connect the AC adapter to the DC-in jack of your notebook.
2. Connect the AC adapter to the power cord.
3. Plug the power cord to an electrical outlet.

### Using Battery Power

1. Install a charged battery in the battery compartment.
2. Remove the AC adapter (if plugged). Your notebook will automatically use the battery power.



#### **NOTE**

- If your notebook is connected to an electrical outlet and the battery is installed, your notebook uses power from the electrical outlet.



# Installing the Battery

To install the battery, follow the steps below:

1. Slide and hold the battery latch to the unlock position.
2. Align and insert the battery to the battery compartment.
3. Push completely until the battery locks into place.
4. Release the latch to the lock position to secure the battery.



## Charging the Battery

The Lithium-ion battery is not fully-charged upon purchase.

To charge the battery, follow the steps below:

1. Install the battery to your notebook. See procedures above.
2. Connect the AC adapter to the DC-in jack of your notebook.
3. Connect the AC adapter to the power cord.
4. Plug the power cord to an electrical outlet.



### NOTE

- The charging time may be longer if you are using your notebook while charging the battery.

### CAUTION

- DO NOT charge the battery if the temperature is below 0°C or higher than 50°C.
- Use only the supplied AC adapter. Using other AC adapters may damage the battery or your notebook.

## Checking the Battery Level

The Battery LED flashes red when the battery is nearly depleted.

When this happens, save your work and plug the AC adapter to charge the battery or replace the battery with a fully charged one.

## Getting Started

---

### Removing the Battery

To remove the battery, follow the steps below:

1. Slide and hold the battery latch to the unlock position.



2. Remove the battery out of the battery compartment.



## Starting Your Notebook

### Using the Display Panel

- To open the display panel, unlock the chassis latch to open the notebook chassis. Lift the cover lid up to upright position.




- To adjust the LCD panel, twist the LCD panel clockwise according to your preference.



- To switch to tablet mode operation, twist the LCD panel 180°, then place it back on the notebook chassis. Lock the chassis latch to secure the LCD panel.





### Turning On Your Notebook

Press the  button until the Power LED lights up.

### Adjusting the LCD Panel Brightness

You can adjust the brightness by pressing the **Brightness control** buttons.




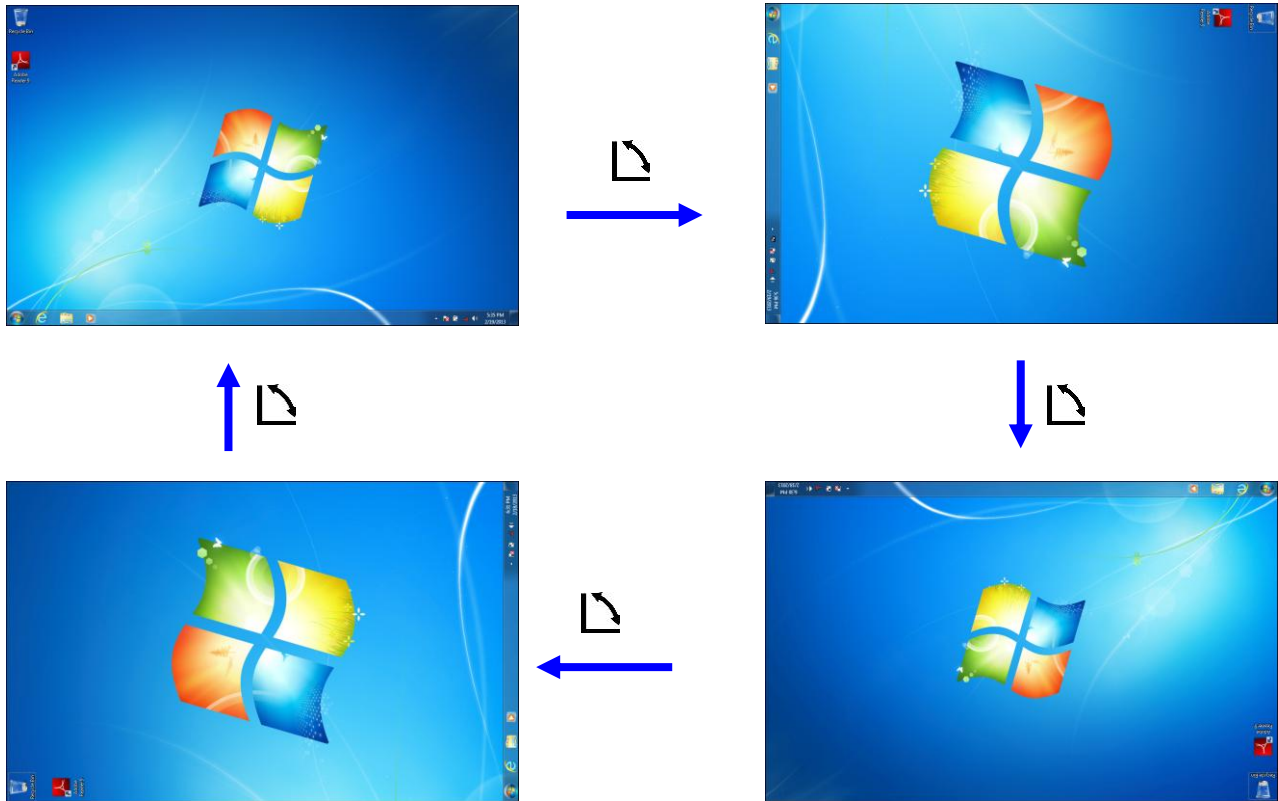 
- To increase the brightness, press the  button.
- To decrease the brightness, press the  button.

## Getting Started

### Changing the Display Orientation

You can rotate the display orientation to suit your preference.

 
Press the  button repeatedly to rotate the display 90°, 180°, and 270° clockwise.




### Shutting Down Your Notebook

It is important to properly shut down your notebook to avoid the loss of unsaved data. To shut down your notebook, follow the steps below:

1. Tap **Start**.
2. Tap **Shut down**.  
Wait for your notebook to turn off power completely before removing the power source (if necessary).

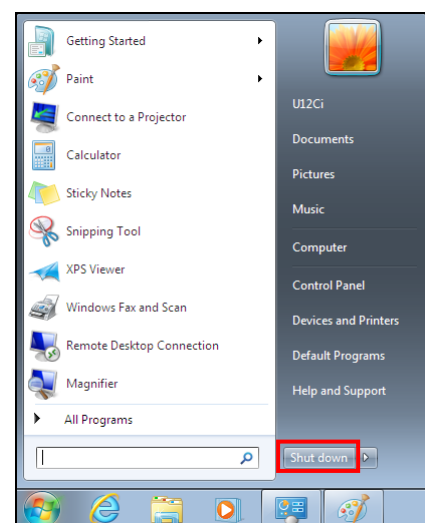

# Using the Keyboard

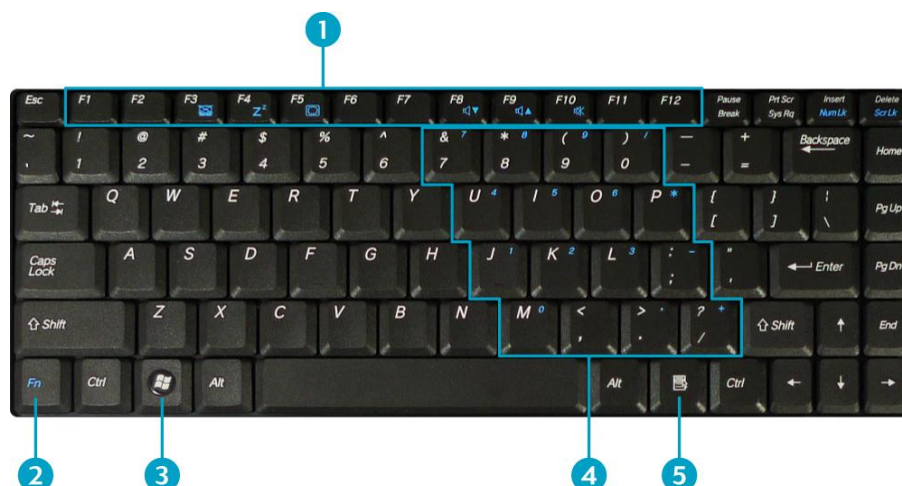 

No.	Keys	Description
1	Function keys	These function keys are used to perform designated tasks. The tasks for each key may vary from one application to another.
2	[Fn]	Press the [Fn] key in combination with other keys to execute a command.
	[Fn] + F3	Toggles the touch pad to on/off.
	[Fn] + F4	Switches to suspend mode.
	[Fn] + F5	Toggles between LCD, External display, or both.
	[Fn] + F8	Decreases the volume by one level.
	[Fn] + F9	Increases the volume by one level.
	[Fn] + F10	Turns on or mutes the volume.
3	Windows key	Press to display the <b>Start</b> menu. This action is the same as tapping the Start icon.
4	Numeric keypad	Press the <b>Num lock</b> key to activate the numeric keypad. Press the keys on the numeric keypad to enter numbers or operands as you would on a calculator.
5	Application key	Press to display an application shortcut menu. This action is the same as right-clicking a mouse button.

# Using the Touch Pad

The touch pad is a cursor-pointing device that provides all the features of a two-button mouse. Its primary function is to move the cursor around the screen. You can also point, select, or drag items or objects on the screen.



## Point

Slide your finger on the touch pad to point the cursor to an item or object on the screen.

## Click

To left-click, move the cursor to the item or object on the screen, then lightly tap the touch pad or press the left button.

To right-click, move the cursor to the item or object on the screen, then press the right button.

## Double-click

To double-click, move the cursor to the item or object on the screen, then tap the touch pad twice or press the left button twice.

## Drag

To drag an item or object, press and hold the left button then slide your finger on the touch pad to move the item or object.

## Scroll

To scroll a page, press and hold the left button then slide your finger on the touch pad to scroll a page.

# Using the Stylus

This notebook comes with an integrated stylus for accurate control input to the LCD touch panel and digitizer. You can use the stylus to point, select, or drag items or objects on the screen.



 
To use the stylus, simply remove it from the back of the notebook.



## Calibrate the Screen


To ensure touch accuracy, calibrate the screen.

1. Tap **Start > Control Panel**.
2. Tap **Hardware and Sound > Calibrate the screen for pen or touch input**.

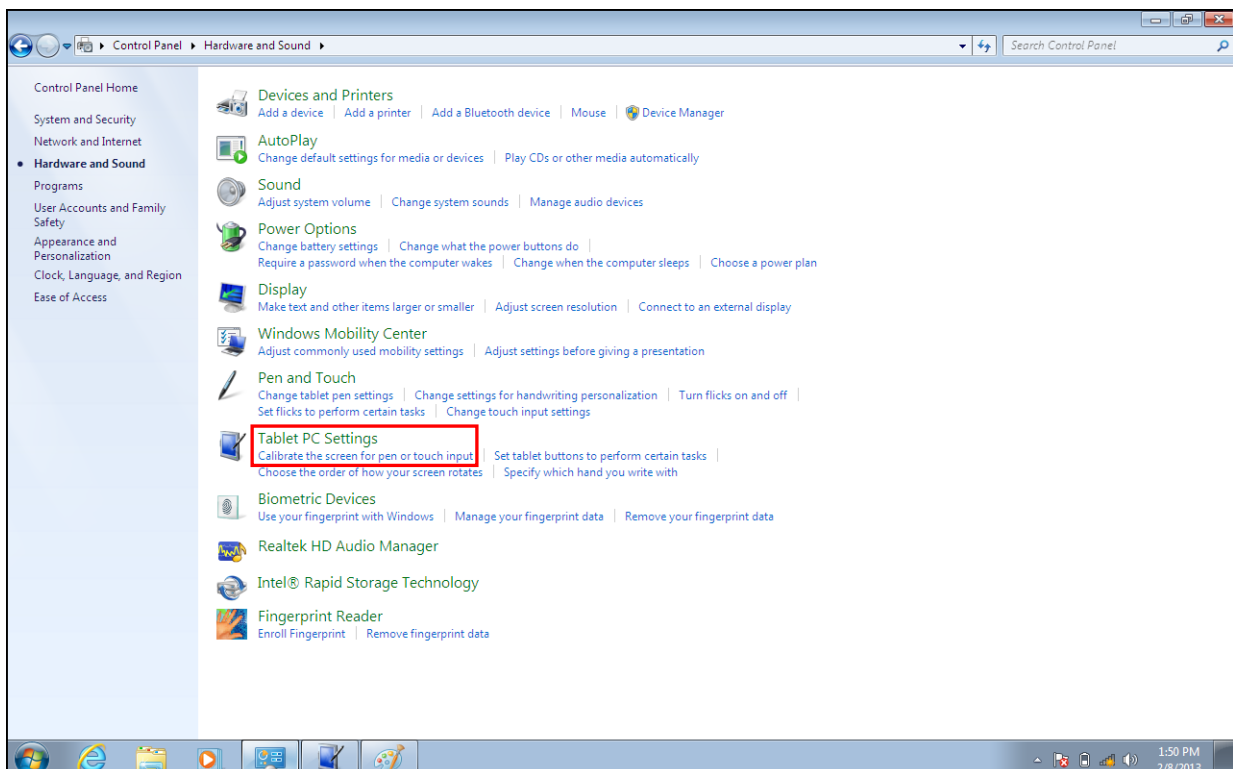



 
3. Tap **Calibrate**.

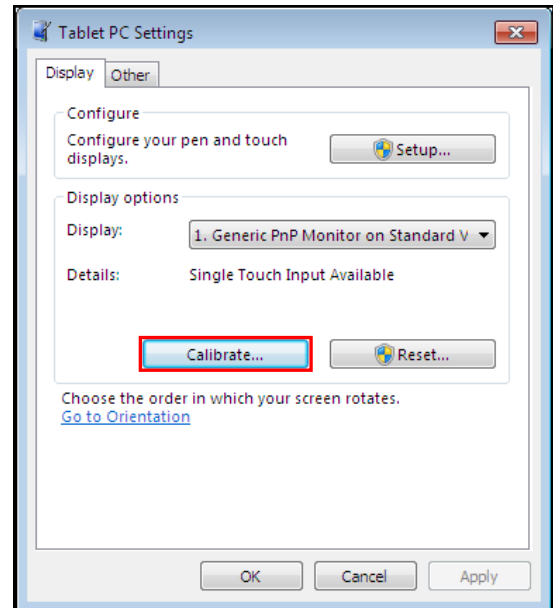

4. Follow the on-screen instructions to complete screen calibration.



 
5. After calibration process is complete, tap **Yes** to save the calibration data.

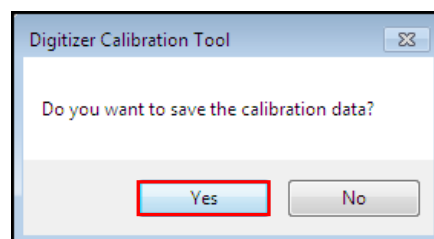




# Using the Quick Menu

 
Press the  button to enter the Quick menu.

Tap on the icon to enable the respective function including wireless network, Bluetooth, 3G, GPS, and airplane mode.



View the battery charge cycles.

Tap the  icon to set up the media file for the program mode. Select the media file and tap **Open**.

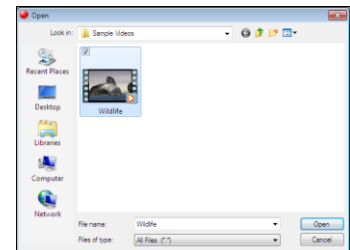

## NOTE

- Tap **YES** to activate the selected function.

# Using the Memory Cards

Your notebook supports different types of memory cards to provide faster data transfer. Supported types are as follows:

- SD card
- SDHC card
- Mini-SD card (with adapter)
- MS card (Memory Stick/PRO)
- MMC card
- Mini-MMC card (with adapter)

## Inserting a Memory Card


1. Open the I/O port cover.
2. With the label side up, push the memory card into the memory card slot until it clicks into place.

 


## Removing a Memory Card

It is important to remove the memory card properly. Improper removal may cause the data in the memory card to be corrupted and your notebook to malfunction.

To properly remove the memory card, follow the steps below:

1. Open the I/O port cover.
2. Tap the removable disk icon (  ) on the system tray.
3. Tap **Eject Mass Storage Device**.  
The system confirms that the device can be safely removed.
4. Push the memory card to eject it.
5. Pull the card out from the slot.

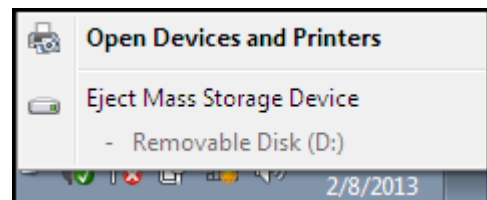


# Making Connections

This chapter will guide you on installing peripheral devices to maximize the use of your notebook.

## Connecting External Display Devices

You can connect your notebook to other display devices, such as a projector, another display monitor, or a TV.

 Your notebook is equipped with a VGA port which provides both digital and analog video signals. VGA D-sub and HDMI interfaces use digital signals; VGA interface uses analog signals.

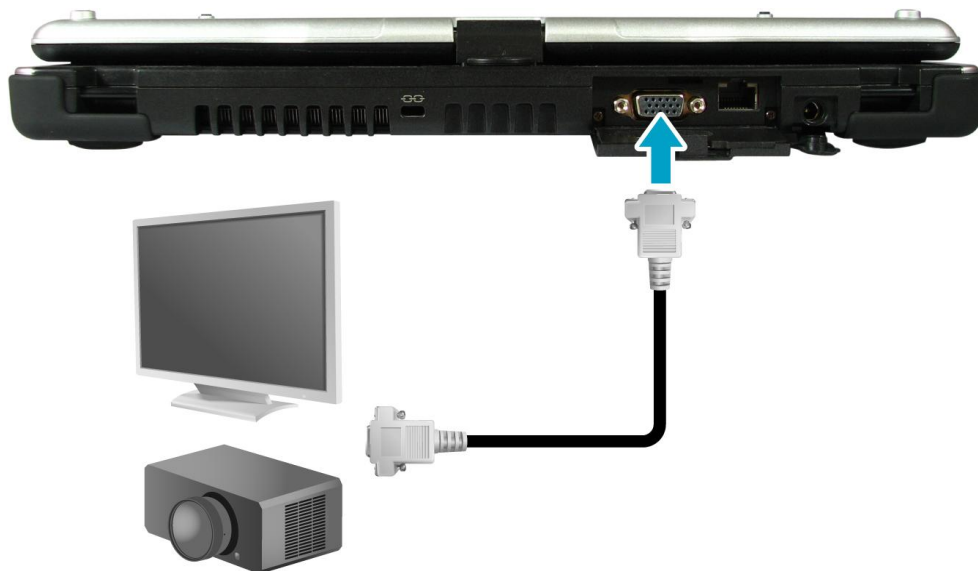

### Connecting a Projector or Display Monitor

1. Open the I/O port cover.
2. Connect one end of a VGA D-sub cable to the VGA port of your notebook.
3. Connect the other end to a projector or display monitor.

### Connecting a TV

1. Open the I/O port cover.
2. Connect a DVI-HDMI or DVI-VGA cable to the VGA port of your notebook.
3. Connect the cable to the adapter.
4. Connect the other end of the cable to the TV.

 


#### NOTE

- The VGA D-sub cable, DVI-HDMI, and DVI-VGA adapters are not included in the package. They are sold separately.

# Connecting USB Devices

You can connect your notebook to other USB devices, such as a mouse, keyboard, digital camera, printer, or an external hard disk drive.

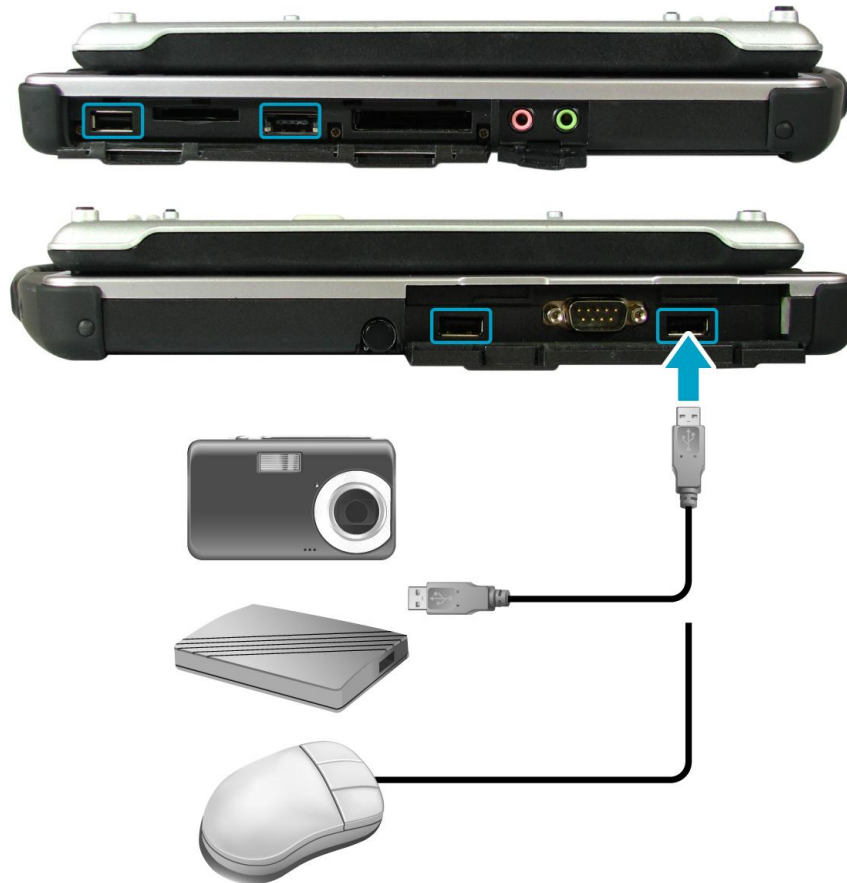

1. Open the I/O port cover.
2. Connect one end of a USB cable to the USB port of your notebook.
3. Connect the other end to the USB device (if necessary).




## **NOTE**

 - The USB cable is not included in the package. It is sold separately or it may come with your USB device.



## Connecting to a Local Area Network (LAN)

You can connect your notebook to a local area network (LAN) using the RJ-45 LAN port.

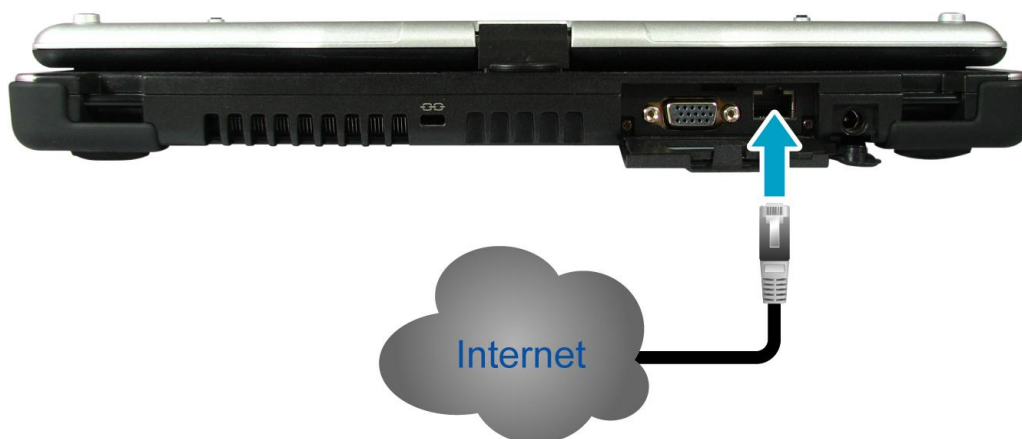

1. Open the I/O port cover.
2. Connect one end of an RJ-45 cable to the LAN port of your notebook.
3. Connect the other end to network hub or a wall socket.




### NOTE

 - The RJ-45 cable is not included in the package. It is sold separately.

## Connecting an External SATA HDD

You can connect your notebook to an external SATA device using the eSATA/USB combo port.

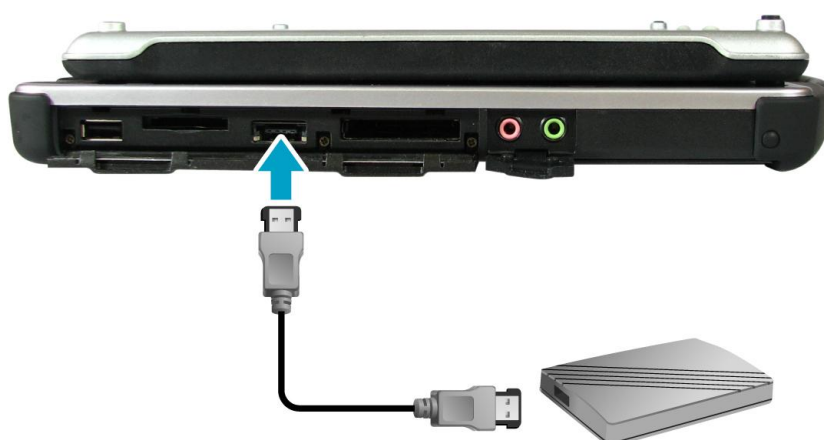

1. Open the I/O port cover.
2. Connect the eSATA cable to the eSATA/USB combo port of your notebook.

# Connecting to Wireless Connections



You can connect your notebook to a wireless local area network, WWAN, Bluetooth, or GPS.

 
Before using a wireless built-in device, you need to turn the respective built-in wireless functions on.


## Connecting to a Wireless Local Area Network

Your notebook comes with a WLAN module. A wireless network can be added either when the network is detected or by manually entering the settings information.

To connect, follow the steps below:

1. Press the  button to open the Quick menu.
2. Tap the WLAN icon () to turn on the wireless network function, and tap **YES** to activate the WLAN function and exit the Quick menu.

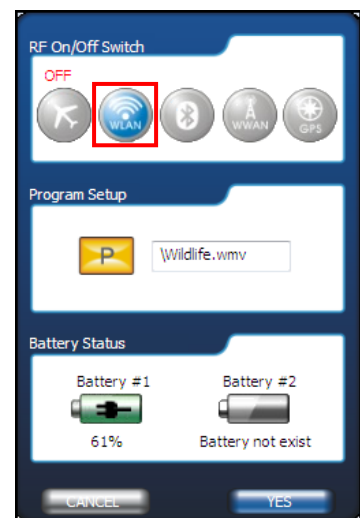


3. Tap the wireless network icon () on the system tray.
4. Available wireless network connections are displayed. Tap the desired wireless network.
5. Tap **Connect**.  
Some networks require a network security key or a password.




### TIPS

 - Check **Connect automatically** box to automatically connect to this network when it is available.

6. Enter the network security key.
7. Tap **OK**.

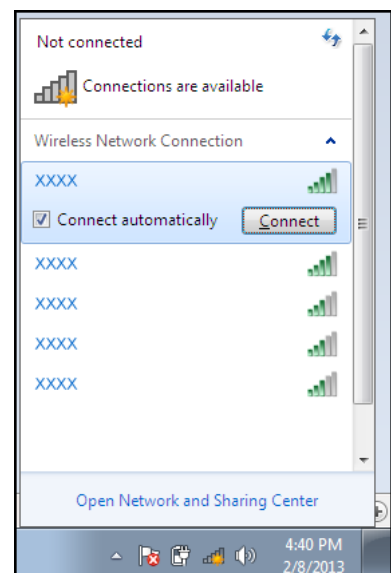

8. After the connection is established, you can see the wireless icon () in the Notification area.

## Making Connections






### NOTE

 
- Wi-Fi access requires service from a wireless service provider. Contact your service provider for more information.
- Actual wireless connectivity will depend on system configuration. Please contact your dealer for more information.

## Connecting to a Bluetooth Device

Your notebook can connect and communicate with other Bluetooth-enabled devices.

To add a device, follow the steps below:

1. Press the  button to open the Quick menu.
2. Tap the Bluetooth icon () to turn on the Bluetooth function, and tap **YES** to activate the Bluetooth function and exit the Quick menu.
3. Tap the arrow on the system tray to display hidden icons.
4. Tap the Bluetooth icon () .
5. Tap **Add a Device**. The system starts scanning for Bluetooth devices and displays the available devices.

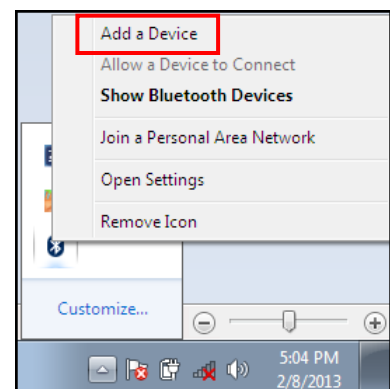


### NOTE


- If the device that you want to add does not appear on the screen, please check if the device is turned on and discoverable.



 6. Tap on a device, then tap **Next** to continue.

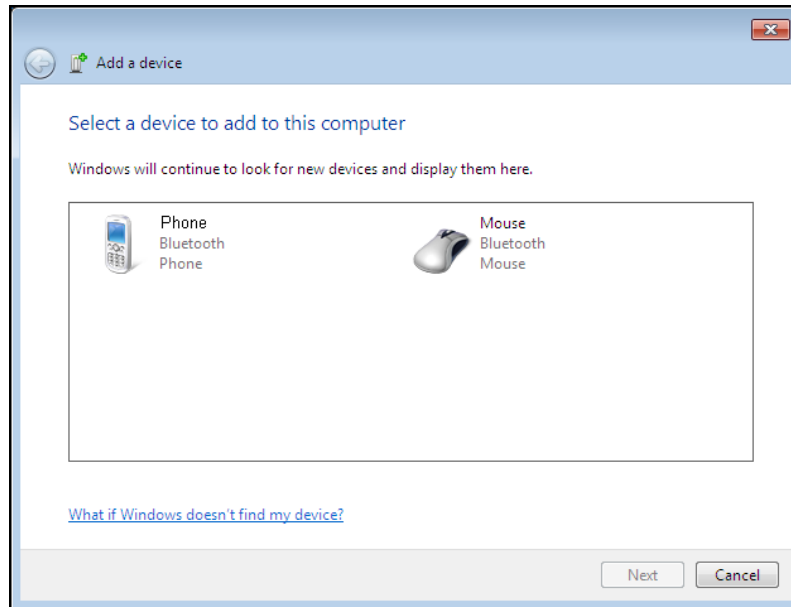

 7. Tap **Close** to complete the pairing connection.

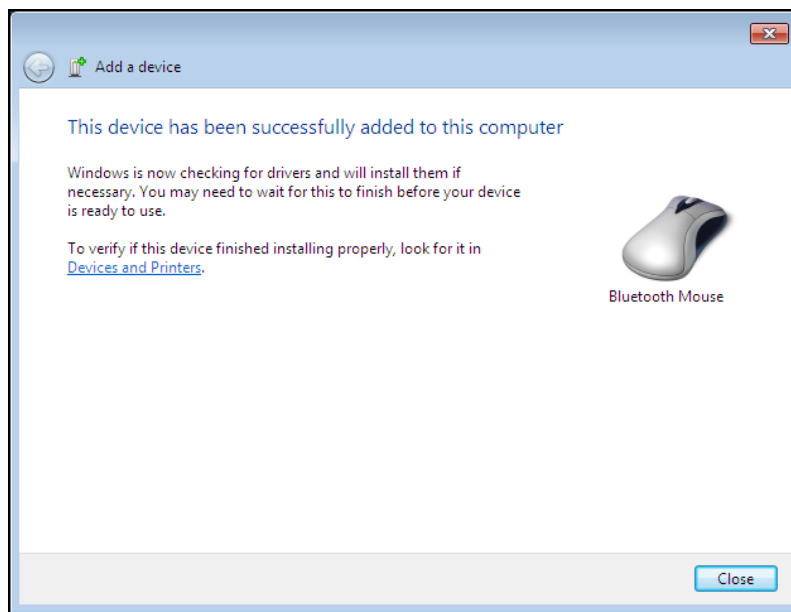

**NOTE**

- Most Bluetooth-enabled devices need to be paired with your notebook. The PIN you enter on the notebook must be the same PIN to be entered on the other Bluetooth device.
- Once a partnership has been created, connecting to that device again will no longer require entering the PIN.

 
# Power Management

This chapter will guide you on how to manage the system power.


## Using the Power Plan

To improve energy efficiency, you can use the power plan to reduce the amount of power your notebook uses, maximize the performance, or balance the two.

1. Tap **Start > Control Panel**.
2. Tap **System and Security > Power Options**.

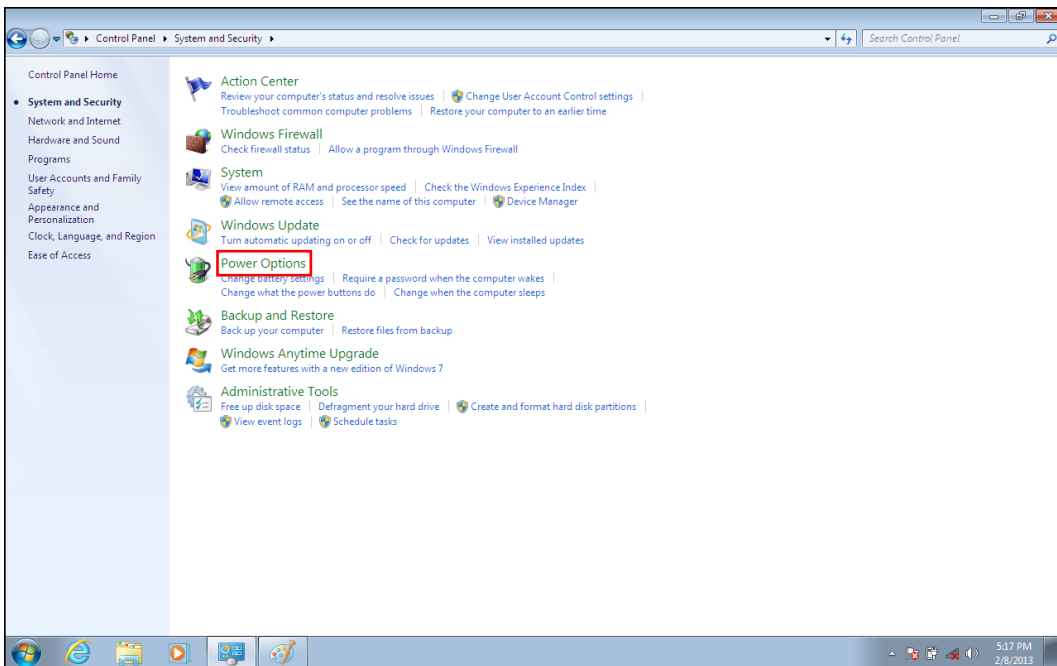

 3. Select a power plan.

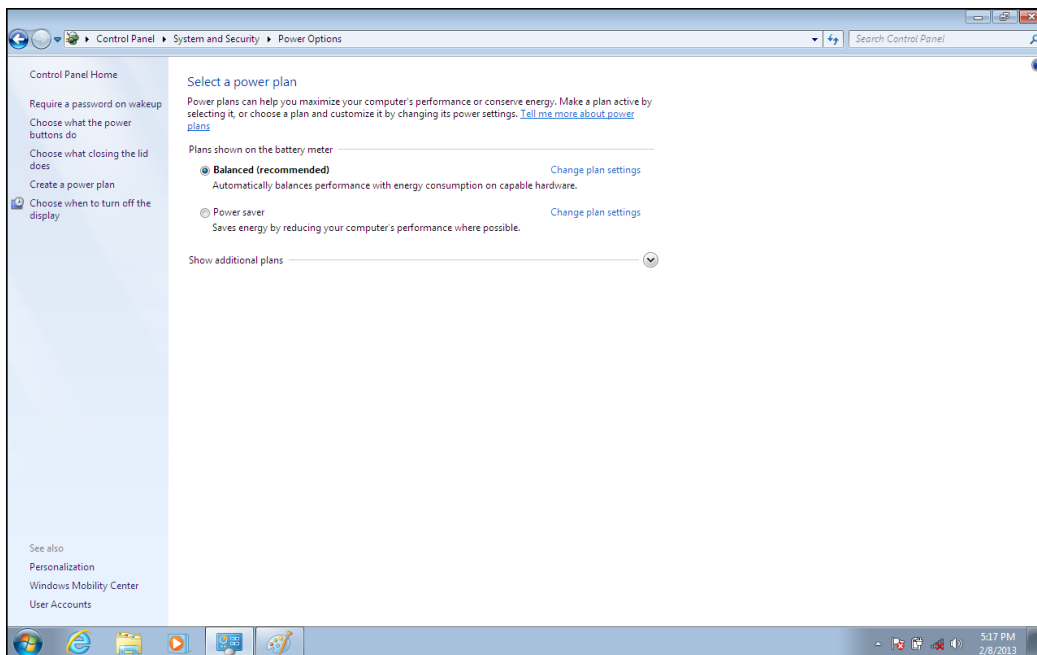


4. To adjust the selected power plan settings, tap **Change plan settings**.

## Using the Power Saving Mode

 
When you are not using the notebook, turn off the notebook or set the notebook to enter sleep mode.

To set the notebook to enter sleep mode, follow the steps below:

1. Tap **Start**.
2. Tap **Shut down > Sleep**.

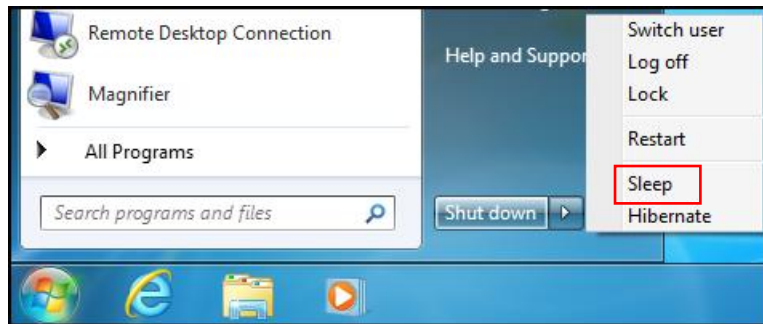

To wake up the notebook from sleep mode, do one of the following:

- Press the  button.
- Press any key on the keyboard.

# Using the BIOS Setup Utility

Your notebook has a BIOS setup utility which allows you to configure important system settings, including settings for various optional functions of the notebook. This chapter explains how to use the BIOS setup utility.

## BIOS Setup Menu

The BIOS setup Utility allows you to configure your notebook basic settings. When you turn your notebook on, the system reads this information to initialize the hardware so that it can operate correctly. Use the BIOS setup utility to change your notebook start-up configuration. For example, you can change the security and power management routines of your system.

## Starting the BIOS Setup Utility

You can only enter the BIOS setup utility as the notebook is booting, that is between the time you turn on the notebook and before the Windows interface appears. If your notebook is already on, shut down your notebook completely (power off) and restart it and then press the **Delete** key to enter the setup utility.

## Navigating and Entering Information in BIOS

Use the following keys to move between fields and to enter information:

 
Function Key	Description
← →	Selects screen.
↓ ↑	Moves up/down to select items.
<b>Enter</b>	Confirms the selection and enters the selected menu screen.
<b>+ / -</b>	Changes an option for the selected items.
<b>F1</b>	Displays the Help screen.
<b>F2</b>	Invokes the previous values.
<b>F3</b>	Loads optimized default values.
<b>F4</b>	Saves the changes and exits Setup.
<b>Esc</b>	Press <b>Esc</b> to exit any section. If you wish to exit the BIOS utility without saving changes, go to the main menu, then press <b>Esc</b> .

Users are allowed to enter new values to replace the default settings in certain fields, and the rest of the fields are specified by system default parameters and cannot be modified by users. Reverse the attribute of the main options and

press **Enter** to enter into the submenu. Press **Esc** to return to the previous configuration page.


## Main Menu

Display the system overview information about BIOS version, CPU features, and total memory size. You can also set the system date and time.

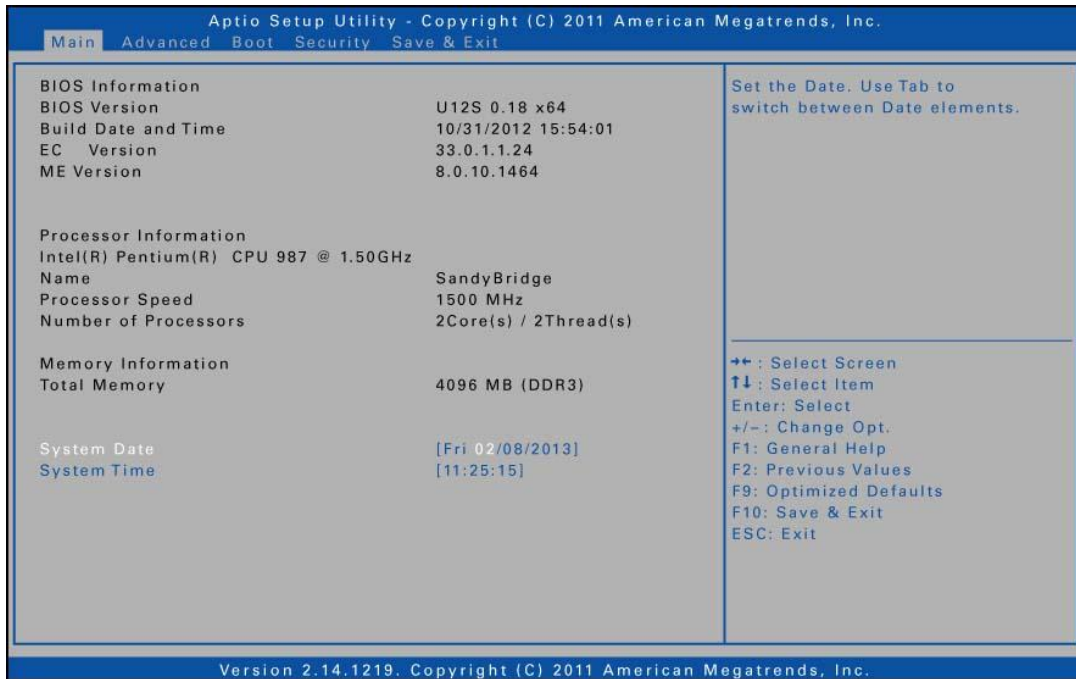


## Advanced Menu

 View and configure SATA mode, FAN calibration, battery calibration, wake up event, RF device control, Trusted Computing, Intel® Rapid Start Technology, Intel® Anti-Theft Technology, and Intel® Smart Connect Technology settings.

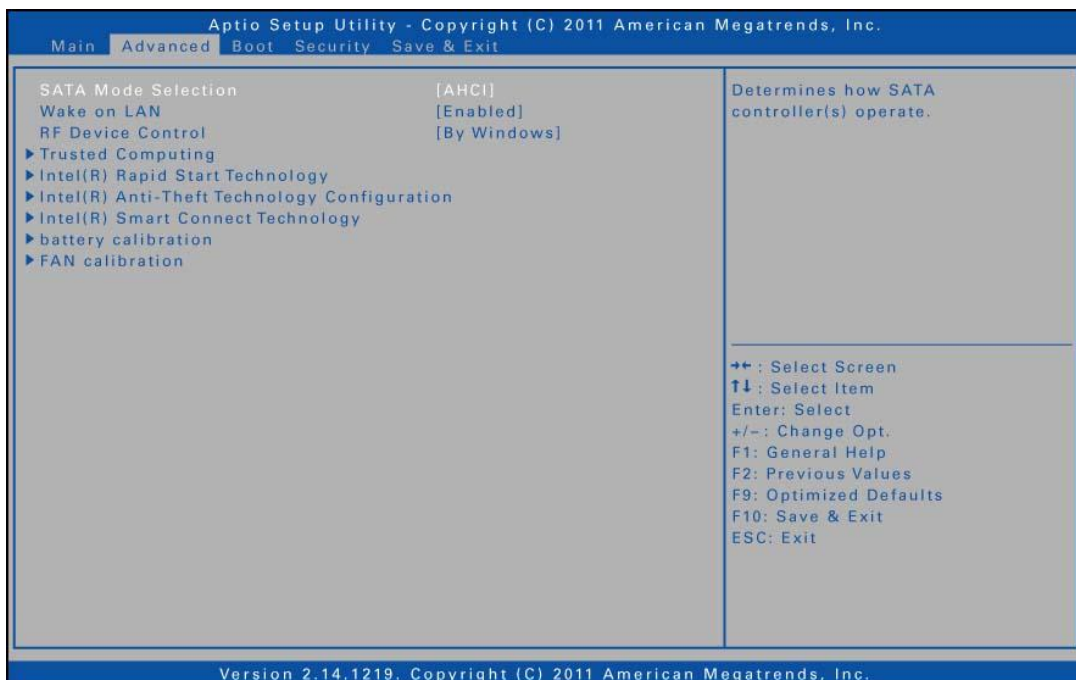


# Boot Menu

 Configure the boot type and boot, network device BBS, and hard drive BBS sequence.

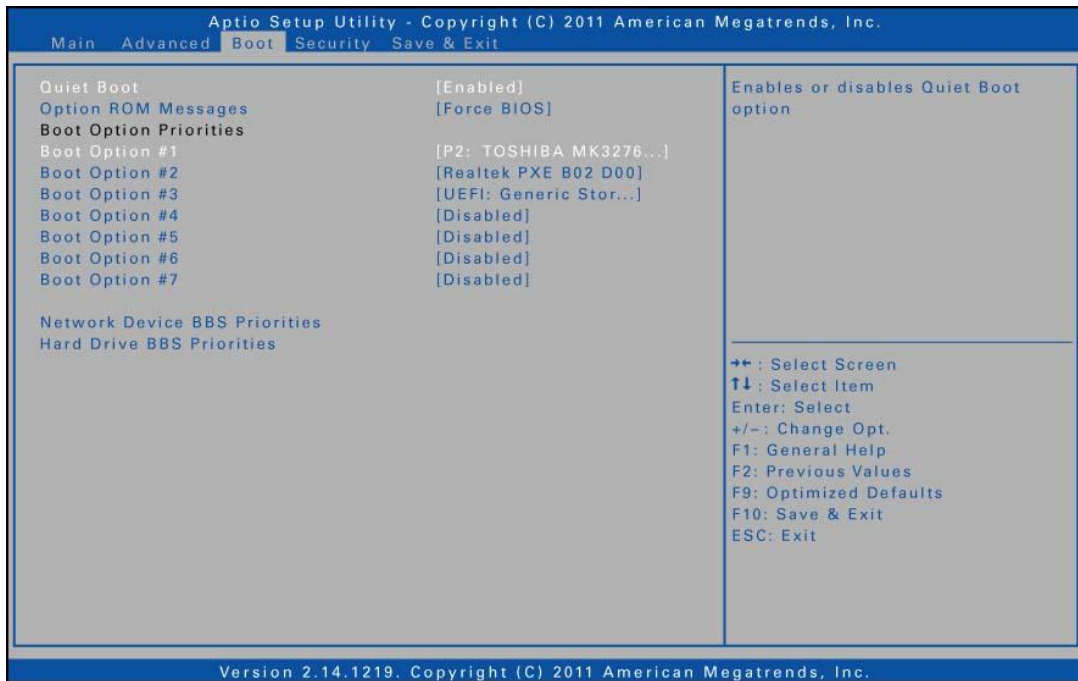


# Security Menu

 Set or change the Administrator and User passwords.

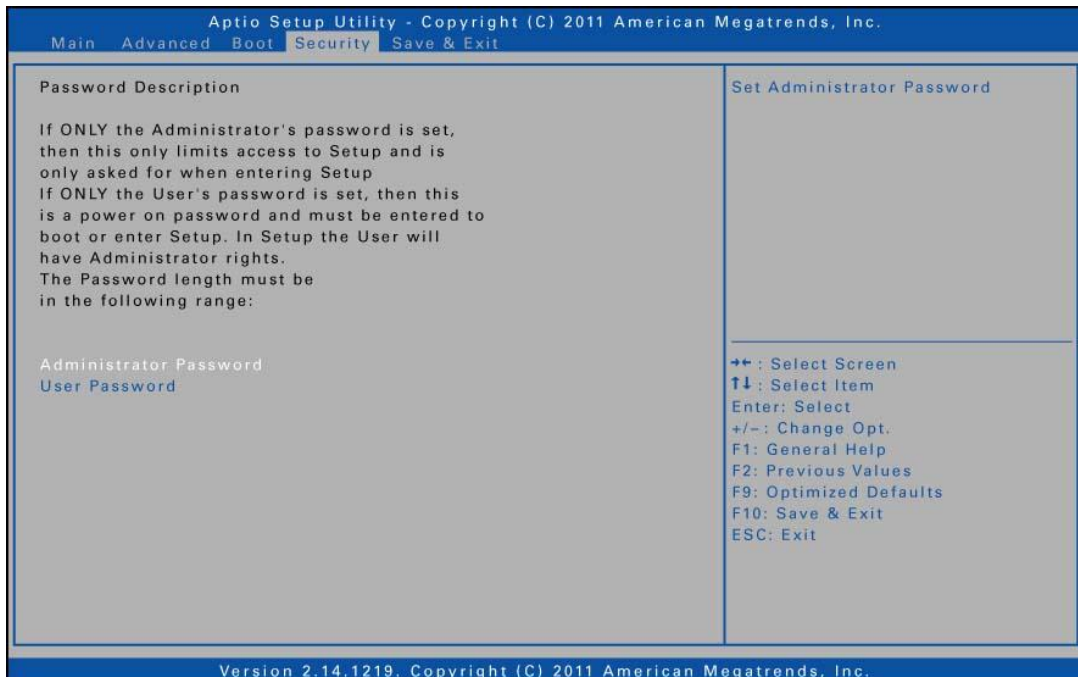

# Save & Exit Menu

 Save or discard the changes, or restore the default values for all setup options before leaving the BIOS Setup Menu.

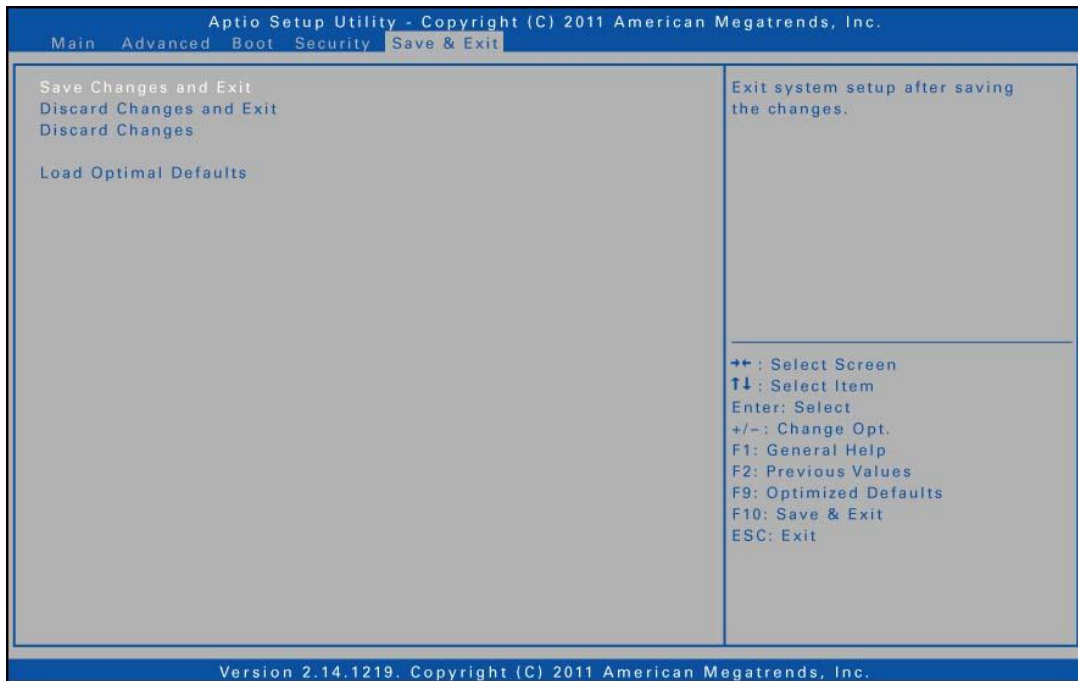

# Troubleshooting

This chapter contains a list of common problems that you might experience when using your notebook, and techniques to try and overcome the problem. If you need additional help, contact your retailer.

Problems	Solutions
The battery isn't charging.	<ul style="list-style-type: none"> <li>• Check if the power adapter is properly connected.</li> <li>• Make sure that the battery is within the recommended charging temperature of -20°C to 50°C.</li> </ul>
The screen suddenly turns blank.	The brightness control is not properly set. Adjust the LCD screen brightness.
	Your notebook might be in standby or hibernate mode. Press the <b>Power</b> button to wake the system.
	If using the battery, the battery may be depleted. Replace with a fully charged battery or connect the power adapter to an electrical outlet.
The notebook cannot connect to Internet.	Check if the LAN cable is properly connected.
	If using wireless, check if your location is out of range of the network. Move your notebook closer to the access point.
	If the network you are connecting to requires a security password, make sure you enter the correct password.
	Check to make sure the settings configurations are correct.
Nothing happens when I press the <b>Power</b> button.	Check if the power adapter is connected to an electrical outlet.
	If using a battery pack, make sure it has enough power. Otherwise, replace the battery.
The notebook cannot resume from hibernate or standard mode.	The battery power level might be too low. Connect the power adapter to an electrical outlet or replace the battery.
The notebook does not produce any sound.	Audio has been muted. Tap the <i>Speaker</i> icon on the right of your Windows taskbar. When the volume control box appears, uncheck the <i>Mute</i> check box.