


# PM30hc Disinfection Test List



To reduce the risk of bacterial or viral infection, smart devices used in the medical field need to be germ-free all the time. That is why PM30hc adopts synthetic resin as housing material, which protects the device from frequent exposing to disinfectant solutions.

PM30hc was undamaged for **6 weeks** of testing disinfection solutions in the list.

**\*Note** that any other ingredients not on the list are harmful to Point Mobile's Devices.

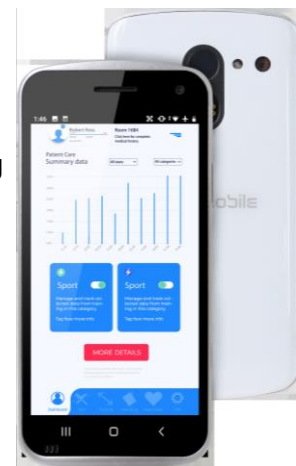

## Approved Disinfection Solutions for PM30hc.

0.5-3.0% Hydrogen Peroxide solution

10:1 Diluted 5.5% Sodium Hypochlorite solution

70-91% Isopropyl Alcohol solution

Azowipe\*

Clinell Universal Sanitizing Wipes

Clorox Formula 409 Glass and Surface Cleaner

Clorox Healthcare Bleach Germicidal Wipes \*

Diversey D10 Concentrate Detergent Sanitizer

Diversey Oxivir Tb Wipes

SC Johnson Windex Original Glass Cleaner with Ammonia-D

Metrex CaviCide1

Medipal Alcohol Wipes

Metrex CaviWipes

Metrex CaviCide

PDI Sani-Cloth AF3 Germicidal Disposable Wipe

PDI Sani-Cloth Bleach Germicidal Disposable Wipe \*

PDI Sani-Cloth Plus Germicidal Disposable Cloth

PDI Super Sani-Cloth Germicidal Wipe

Sani Professional Disinfecting Multi-Surface Wipes

Sani-Hands® Instant Hand Sanitizing Wipes

\*The test condition is 3 cycles of each solutions a day during 6 weeks.

1 cycle : Applying the medication and dry, Check Exterior of devices and test the activation of devices and charging